

SIG SAUER® ELECTRO-OPTICS

ZULU6™ IMAGE STABILIZED BINOCULAR

QUICK REFERENCE GUIDE

INSTRUCTIONS:

INSTALLING BATTERIES:

The battery port is located on the left side (10x30) or bottom (16x42) of your ZULU6 binoculars. Unscrew the battery port cover and insert the battery with the positive (+) side facing out. Tighten the battery port cover until it is finger tight.

POWER ON/OFF:

Turn on the image stabilization of your ZULU6 binoculars by toggling the power switch forward. A green power indicator light will light up when the power is on.

INTERPUPILLARY DISTANCE OF BINOCULARS:

Set the distance between the centers of the right and left ocular lenses of the binoculars to match the distance between your left and right eyes. The field of view of the binoculars will be clear when your interpupillary distance is set correctly.

DIOPTER ADJUSTMENT:

View an object about 100 yards away from you. Close your right eye and adjust the focus wheel of the binoculars until the image is clear and sharp. Next, while looking at the same object, close your left eye and adjust the diopter adjustment ring on the right ocular lens until the image is clear and sharp.

FOCUS ADJUSTMENT:

The focus wheel is on the front of the ZULU6 binoculars above the objective lenses. Rotate the focus wheel clockwise to focus on objects closer.

EYECUP ADJUSTMENT:

SIG SAUER ZULU6 binoculars feature eyecups you can twist up and down to accommodate the eye relief distance required when wearing eyeglasses.

The logo for SIG SAUER, featuring the brand name in a bold, italicized, sans-serif font. The 'S' is particularly large and stylized.