

ROME01™

HANDGUN ADAPTER PACK AND HANDGUN MOUNTING KIT

INSTRUCTIONS

The ROME01 Red Dot Sight with Handgun Adapter Pack allows the ROME01 sight to be easily installed on a wide range of popular handgun models. The Handgun Adapter Pack supports the following:

- Glock (standard dovetail and MOS)
- CZ-75
- Springfield XD
- Smith & Wesson (SW) M&P and C.O.R.E.
- Heckler & Koch (HK) P2000
- 1911 (standard dovetail)
- SIG SAUER 1911, P220, P225-1, P226, P227, P229, P229-1, P239, P320, SP2022

All trademarks belong to their respective owners.

Individual Handgun Mounting Kits are also available for those who only need a mounting solution for a specific handgun model.

Notes: (1) ROME01 mounts included in the Handgun Adapter Pack or individual Mount Kits support standard iron sight replacement only. Target sights or other unique dovetail designs are not supported. (2) We've designed these mounts to be compatible with the majority of the individual handguns in each product family shown – as handgun designs are controlled by their respective companies, SIG SAUER can not guarantee 100% compatibility within a specific product category. (3) SIG SAUER recommends the use of a qualified gunsmith to remove the existing rear sight from the handgun. (4) Always practice safe firearms handling techniques – ensure the handgun is unloaded and pointed in a safe direction before performing any sight removal or installation steps.

! WARNING

Before working on your ROME01 sight always ensure that the firearm is unloaded with the safety on.

CONFIGURATION:

Each mount consists of a Dovetail Block and Spacer. The Dovetail Block replaces the handgun's standard rear sight. The Spacer follows the handgun slide's contour and provides a stable base for mounting the ROME01 Sight. Optics-ready handguns (Glock MOS and S&W C.O.R.E) use a one piece Mounting Plate as the interface between the handgun slide and the ROME01 sight, and do not require a Dovetail Block.






GENERAL INSTALLATION INSTRUCTIONS:

(All except Glock MOS and S&W C.O.R.E models)

Dovetail Bases and Spacers are identified by corresponding numbers / letters as shown below.

MODEL	SPACER	DOVETAIL BASE
Glock	1A	1B
CZ-75	2A	2B
Springfield XD	3A	3B
SW M&P	4A	4B
HK P2000	5A	5B
Standard 1911	6A	6B
SIG 1911	SIG 1911	SIG 1911
SIG "P" Series (1)	SIG P220 ... P229-1	SIG
SIG "P" Series (2)	SIG P229... SP2022	SIG
SIG "P" Series (3)	SIG P320	SIG


- Identify the proper Dovetail Block and Spacer for the selected handgun model.
- When installed, numbers / letters face "up" and are "readable" from the rear of the handgun.
- With the existing handgun rear sight removed, slide the appropriate Dovetail Block into the slide rear sight dovetail until centered. Ensure lettering is facing "up" and "rearward".
- Place the appropriate Spacer over the Dovetail Block, onto the top surface of the handgun slide. The raised surface of the Dovetail Block will be visible through the rectangular cut centered left to right in the Spacer. Ensure the Spacer locator pins are facing "up" and are at the "rear" of the slide.
- Place the ROME01 Sight onto the Spacer, ensuring the Spacer locator pins are seated in the corresponding locator holes on the bottom rear of the ROME01 Sight.
- Center the ROME01 Sight and Spacer left to right on the slide so the Spacer contour matches the slide contour.
- Install (2) provided 6-48 screws through the ROME01 Sight mounting holes into the Dovetail Block. The 6-48 screw is identified by a "blue" color Nylox® patch on the threads. The screw head is sized to accommodate a 1/8" Hex Bit.
- Hand tighten screws, then torque to 28 in-lbs. Screws include a Nylox® Patch – there is no need to use a separate thread lock, such as Loctite®.
- Follow the instructions provided in the ROME01 Users Manual for proper setup and operation of the ROME01 Sight.
- It is recommended that screw tightness be verified after firing the 1st 50 rounds, and again after each shooting session, to ensure proper function, accuracy and safety.

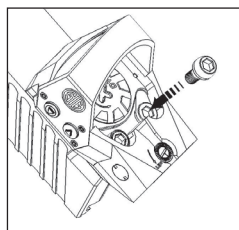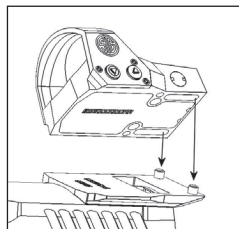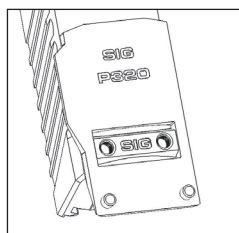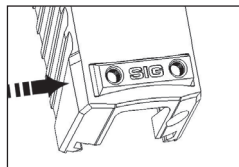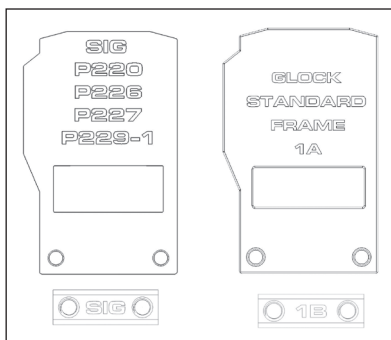

GLOCK MOS AND S&W C.O.R.E.
GENERAL INSTALLATION INSTRUCTIONS:


- “Optics-ready” models feature a machined mounting surface on the top of the slide that accommodate different optics by the use of sight-specific mounting plate.
- Prepare the handgun for sight installation by removing any existing plates or covers per the handgun manufacturer’s instructions
- Identify the correct Mounting Plate for the selected handgun model.
- Place the Mounting Plate onto the corresponding mounting surface of the handgun slide. Ensure the Mounting Plate mounting holes are aligned with the corresponding threaded holes on the slide mounting surface. Ensure the Mounting Plate locator pins are facing “rearward”.

MODEL	MOUNTING PLATE
Glock MOS	GLOCK MOS
S&W C.O.R.E	S&W C.O.R.E

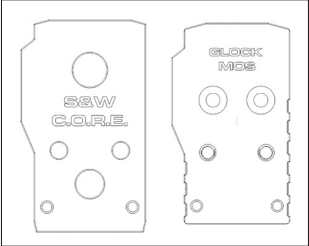


GLOCK MOS:

- Attach the Mounting Plate to the Glock MOS slide with the (2) T-10 Torx screws provided with the Glock MOS, following the instructions included with the handgun.
- Place the ROMEO1 Sight onto the Mounting Plate, ensuring the Mounting Plate locator pins are seated in the corresponding locator holes on the bottom rear of the ROMEO1 Sight.
- Install (2) provided 6-48 screws through the ROMEO1 Sight mounting holes into the Plate. The 6-48 screw is identified by a “blue” color Nylox® patch on the threads. The screw head is sized to accommodate a 1/8” Hex Bit.

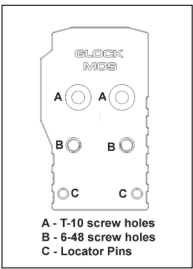


S&W C.O.R.E.:

- Place the Plate onto the corresponding mounting surface of the handgun slide. Ensure the Plate mounting holes are aligned with the corresponding threaded holes on the slide mounting surface. Ensure the Plate locator pins are facing “rearward”
- Place the ROMEO1 Sight onto the Plate, ensuring the Plate locator pins are seated in the corresponding locator holes on the bottom rear of the ROMEO1 Sight.
- Install (2) provided 6-32 screws through the ROMEO1 Sight mounting holes, the Mounting Plate, and into the threaded mounting holes in the S&W C.O.R.E. slide. The 6-32 screw is identified by a “green” color Nylox® patch on the threads. The screw head is sized to accommodate a 1/8” Hex Bit.

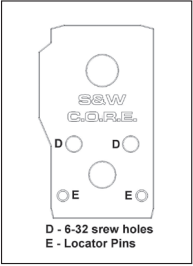

BOTH GLOCK MOS & S&W C.O.R.E.:

- Hand tighten screws, then torque to 28 in-lbs. Screws include a Nylox Patch – there is no need to use a separate thread lock, such as Loctite®.
- Follow the instructions provided in the ROMEO1 Users Manual for proper setup and operation of the ROMEO1 Sight.
- It is recommended that screw tightness be verified after firing the 1st 50 rounds, and again after each shooting session, to ensure proper function, accuracy and safety.

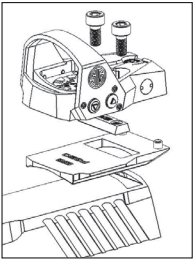

SIG SAUER® Electro-Optics Infinite Guarantee® / Limited Lifetime Warranty

SIG SAUER has manufactured the most rugged, dependable, high-performance firearms for more than two centuries. Our heritage of design, engineering, and precision-manufactured quality predates the existence of any other optics company worldwide. We understand the importance of quality in the line of fire, at the shooting range or on your next hunt. SIG SAUER Electro-Optics had to earn the right to wear that badge and the Infinite Guarantee has your back, forever. Period.

We will repair or replace your SIG SAUER product in the event it becomes damaged or defective, at no charge to you. If we cannot repair your product, we will replace it with a product in perfect working order of equal or better physical condition.

SIG SAUER Infinite Guarantee®

- Unlimited Lifetime Guarantee
- Fully Transferable
- No Warranty Card Required
- No Receipt Required
- No Time Limit Applies
- No Charge

Please note that our Infinite Guarantee excludes coverage for intentional damage, misuse, cosmetic damage that does not affect the performance of the optic, loss, theft, or unauthorized repair or modification. Excludes electronic and Tritium components.

Customers seeking warranty coverage must first obtain a Return Merchandise Authorization (RMA) by contacting SIG SAUER Customer Service, and return the product unloaded and freight prepaid.

ANY WARRANTIES IMPLIED BY LAW, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED. REPAIR, ALTERATION, OR REPLACEMENT AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY FOR ANY DEFECTIVE PRODUCT. IN NO EVENT SHALL SIG SAUER OR ANY COMPANY AFFILIATED WITH SIG SAUER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND ARISING OUT OF THE PURCHASE OR USE OF THIS PRODUCT, WHETHER BASED UPON CONTRACT, TORT, STATUTE, OR OTHERWISE. Some states do not allow the exclusion or limitation of implied warranties, or the exclusion or limitation of incidental or consequential damages, so some or all of the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

THIS WARRANTY APPLIES TO COMMERCIAL CUSTOMERS ONLY, AND DOES NOT APPLY TO GOVERNMENT, MILITARY, LAW ENFORCEMENT, OR NON-US CUSTOMERS. NON-US COMMERCIAL CUSTOMERS MUST PURCHASE PRODUCT THROUGH AN AUTHORIZED SIG SAUER DEALER WITHIN THEIR COUNTRY OF RESIDENCE FOR THIS WARRANTY TO APPLY.



SIG SAUER Electronic & Tritium Component Limited 5-Year Warranty

SIG SAUER warrants that the electronic and tritium components of the enclosed product were originally manufactured free of defects in workmanship, material, and mechanical function. For a period of five (5) years from the date of manufacture, SIG SAUER agrees to correct any defect in these components by repair, adjustment, or replacement, at SIG SAUER's option, with the same or comparable quality components (or by replacing the product at SIG SAUER's option); provided however that a Return Merchandise Authorization (RMA) is first obtained by contacting SIG SAUER Customer Service, and that the product is returned unloaded and freight prepaid.

This limited warranty is null and void if the product has been misused, damaged (by accident or otherwise), damaged through failure to provide reasonable and necessary maintenance as described in the user's manual, or if unauthorized repair or any alteration, including of a cosmetic nature, has been performed on the product. This limited warranty does not apply to normal cosmetic wear and tear of any parts.

ANY WARRANTIES IMPLIED BY LAW, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED. REPAIR, ALTERATION, OR REPLACEMENT AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY FOR ANY DEFECTIVE PRODUCT. IN NO EVENT SHALL SIG SAUER OR ANY COMPANY AFFILIATED WITH SIG SAUER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND ARISING OUT OF THE PURCHASE OR USE OF THIS PRODUCT, WHETHER BASED UPON CONTRACT, TORT, STATUTE, OR OTHERWISE. Some states do not allow the exclusion or limitation of implied warranties, or the exclusion or limitation of incidental or consequential damages, so some or all of the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

THIS WARRANTY APPLIES TO COMMERCIAL CUSTOMERS ONLY, AND DOES NOT APPLY TO GOVERNMENT, MILITARY, LAW ENFORCEMENT, OR NON-US CUSTOMERS. NON-US COMMERCIAL CUSTOMERS MUST PURCHASE PRODUCT THROUGH AN AUTHORIZED SIG SAUER DEALER WITHIN THEIR COUNTRY OF RESIDENCE FOR THIS WARRANTY TO APPLY.

⚠ WARNING: CANCER AND REPRODUCTIVE HARM – www.P65Warnings.ca.gov

**FOR PRODUCT SERVICE ON THIS MODEL,
PLEASE CALL 603-610-3000**
27100 SW Parkway Avenue, Wilsonville, OR 97070 USA

