

FOXTROT-MPR™

MINI HANDHELD FLASHLIGHT

SIGSAUER

QUICK START GUIDE



KEY FEATURES

FOXTROT-EDC FULL-SIZE

- 450 Lumens (High), 100 Lumens (Medium), 10 Lumens (Low), 1 Lumen (Moonlight)
- (1) 10440 High-Capacity Li-ion Rechargeable Battery
- 8 User Configurable Modes – High, Medium, Low, & Moonlight
- Flexcore™ Technology Allows The Light To Run Using;
1 x 10440 High-Capacity Li-ion Rechargeable Battery or
1 x AAA Battery (optional, not included)
- Up to 1 Hour of Runtime Using The Supplied 10440 Rechargeable Battery
- Push Button Activation
- Momentary & Latching Activation
- Wave Style Deep Carry Pocket Clip

OPERATION

To operate the light in latching mode, press the push button activation switch until you feel a click. The light will now remain ON. To turn the light OFF press the push button activation switch until you feel a click and release the activation switch.

To operate the light in momentary mode, slightly press the push button activation switch. To turn the light OFF release the push button activation switch.

PROGRAMMING MODES

The FOXTROT-MPR™ features eight selectable modes:

Mode 1: Low-Med-High

Mode 2: High-Med-Low

Mode 3: Moonlight-Low-Med-High

Mode 4: Medium-High

Mode 5: High only

Mode 6: Medium only

Mode 7: Low only

Mode 8: Moonlight only

SET MODE

Turn light OFF. Press the tail switch 6 times quickly. On the 6th press, hold for 0.5 seconds. The light will flash to indicate current mode:

1 flash = Mode 1

2 flashes = Mode 2

3 flashes = Mode 3

4 flashes = Mode 4

5 flashes = Mode 5

6 flashes = Mode 6

7 flashes = Mode 7

8 flashes = Mode 8

Repeat steps to cycle to your desired mode.

RECHARGING HI-CAPACITY LI-ION RECHARGEABLE BATTERIES

To recharge the supplied 10440 rechargeable battery, use the supplied USB-C cable and insert the USB-C end of the cable into the USB-C port on the battery. Insert the USB end of the cable into a suitable USB power outlet.

Battery charging indicator:

• 10440 battery: The LED on the (+) end of the battery turns solid green when fully charged.

BATTERY INSTALLATION AND REPLACEMENT

1. Unscrew bezel counterclockwise to remove the battery.
2. Insert either one fully charged 10440 Li-ion battery or one AAA battery (optional, not included) into the flashlight, with the negative (-) end inserted first into the battery housing.
3. After battery is inserted into the housing, thread the bezel clockwise back into the housing until fully tightened.

⚠ WARNING: CANCER AND REPRODUCTIVE HARM – www.P65Warnings.ca.gov

RISK GROUP 2

WARNING: IR emitted from this product. Do not stare at operating lamp.

CAUTION: Possibly hazardous optical radiation emitted from this product. Do not stare at operating lamp. May be harmful to the eyes.

SIGSAUER

Scan QR code to download
user manuals at
sigsauger.com/owners-manuals/

