

## 40MM LASER BORE SIGHT ADAPTER

- Ensure the grenade launcher is unloaded.
- Insert the adapter into the grenade launcher bore from the muzzle end as shown below.
- Insert the laser aiming device into the pilot hole in the front of the adapter.
- Follow the instructions for bore sighting the launcher.

