


SIGSAUER

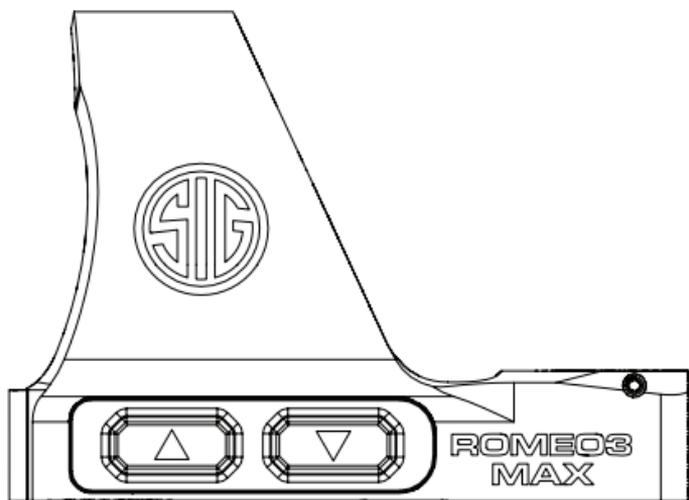

ROMEO3MAX PRO

1X31 Competition Reflex Sight
OPERATOR'S MANUAL



READ THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL CAREFULLY BEFORE USING THIS OPTIC; DO NOT DISCARD THIS MANUAL.

CONTENTS

Introduction	3
Contents	4
Key Features	5
ROMEO3MAX PRO Product Identification	6
Button Battery Warning Information	9
Operation	11
Installation	13
Mounting The Sight	13
Sight Adjustments And Zeroing	14
Maintenance	16
Troubleshooting	17
Specifications	18
SIG SAUER® Infinite Guarantee®	20

INTRODUCTION

The ROMEO3MAX PRO is the ultimate competition-grade reflex sight, featuring the latest technology and premium optical components for unrivaled clarity and performance. Building on the very successful ROMEO3MAX optic, with input from World Champion shooter Max Michel, the ROMEO3MAX PRO sets a new standard for elite competition-focused pistol red dots. A massive 31mm aspherical glass lens with industry-leading optical coatings and light transmittance, and a perfectly crisp point-source LED emitter with 15 brightness settings make the ROMEO3MAX PRO a true performer in all lighting conditions. MOTAC and MAGNETAC technologies help ensure long battery life, and a side-mounted battery tray means never having to remove and re-zero the optic when the time does come for a battery change. The low deck height of the redesigned ROMEO3MAX PRO aluminum housing means you can use suppressor-height iron sights for a true co-witness or backup aiming solution. Best of all, the ROMEO3MAX PRO now utilizes the industry-standard SIG PRO footprint, meaning it will direct-mount to any SIG pistol with the PRO optics-ready slide, as well as to many other pistols on the market, without the need for adapter plates.

CONTENTS

- ROMEO3MAX PRO Reflex Sight
- CR1632 Battery
- MAGNETAC™ Rubber Sight Cover with Integrated Magnet
- Keychain Multi-Tool with Torx® Bit (Mounting Screws) and Flat Head Bit (Windage/Elevation Adjustments and Battery Tray)
- M4 Mounting Screws (2)
- Operator's Manual



Scan the QR code to visit [sigsauer.com](https://www.sigsauer.com) where you will find additional information about SIG SAUER products, SIG SAUER Academy and the SIG Experience Center, Special Programs, and additional support.



KEY FEATURES

- Common SIG PRO mounting footprint for ultimate compatibility across the industry.
- 31mm glass aspherical lens with high transmittance red notch reflector coating for excellent light transmittance, reticle brightness, and zero distortion.
- Crisp red dot reticle available in various sizes, with 15 brightness settings for rapid target engagement under a full range of lighting conditions.
- MOTAC™ (Motion Activated Illumination System) powers up when it senses motion and powers down when it does not.
- MAGNETAC (Magnetic Activation) turns the optic off when using the included Rubber Sight Cover, for preserving battery life even more between match stages or when storing/transporting the optic.
- Aircraft grade CNC Aluminum housing ensures a lifetime of reliable service.
- Dependable waterproof (IPX-7 rated for complete water immersion up to 1 meter) and fogproof performance.

ROME03MAX PRO PRODUCT IDENTIFICATION

- A – ▲ (Up) Brightness Adjustment Button
- B – ▼ (Down) Brightness Adjustment Button
- C – Battery Tray
- D – Battery Tray Screws
- E – Windage Adjustment
- F – Elevation Adjustment
- G – Mount Screw Holes



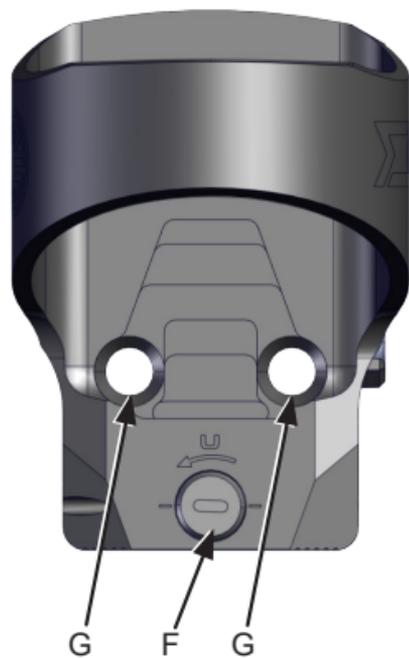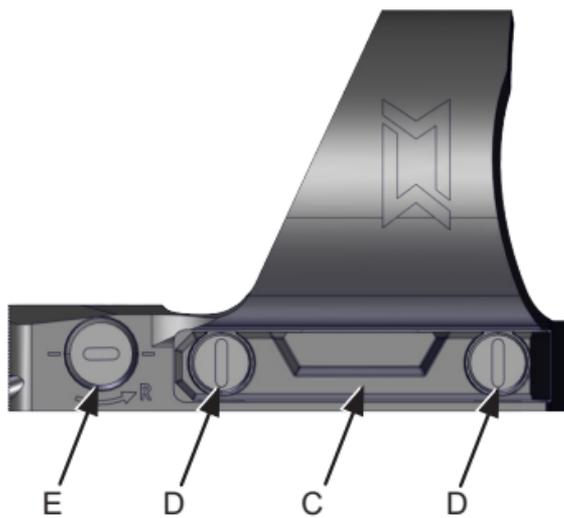



WARNING

UNLOAD/CLEAR



BEFORE WORKING ON YOUR ROMEO3MAX PRO SIGHT, ALWAYS ENSURE THAT THE FIREARM IS UNLOADED AND CLEARED WITH THE SAFETY ON AND POINTED IN A SAFE DIRECTION. FAILURE TO COMPLY COULD RESULT IN INJURY OR DEATH.

BUTTON BATTERY WARNING INFORMATION

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Keep in original package until ready to use.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- For treatment information call, The National Battery Ingestion Hotline (NBIH) 1-(800) 498-8666.

WARNING

- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Compatible battery: CR1632 Nominal voltage: 3V
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 212°F (100°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion, resulting in chemical burns.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.




WARNING: CANCER AND REPRODUCTIVE HARM—www.P65warnings.ca.gov



OPERATION

Installing the Battery

The battery is located in a tray that is secured with 2 small slotted screws on the right side of the optic. Using the included multi-tool or any small flat blade screwdriver, loosen both slotted screws completely. The screws are designed to be captured in the tray but can fall out when the tray is removed, so take care not to lose them. Use a plastic tool in the cutout above the tray to pry the tray out of the housing (see illustration below). If using a metal tool, place a layer of plastic or paper between the tool and the aluminum housing to avoid damaging the finish. Replace the battery with a new CR1632 coin cell with the positive (+) side facing down. Slide the tray all the way back into the housing and tighten the 2 slotted screws until finger tight. Take care not to overtighten or strip the slotted screws.

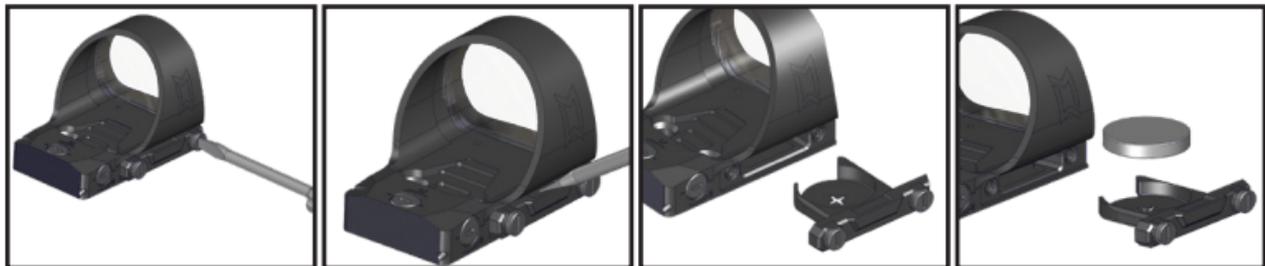

Turning Sight On and Off

- To turn the sight ON or OFF, press and hold either the ▲ (UP) or ▼ (DOWN) brightness adjustment button for 2 seconds.
- The ROMEO3MAX PRO features MOTAC (Motion Activated Illumination System). If the illuminated reticle does not detect motion for 2 minutes, it automatically shuts off. The instant the optic detects motion, it powers on returning to the previous brightness and reticle setting.
- The ROMEO3MAX PRO also features MAGNETAC (Magnetic Activation), which works with the included rubber sight cover. When the optic is turned ON, if the cover is installed on the optic, a strong magnet inside the cover works with a sensor in the optic to turn off the reticle to conserve battery life. Simply remove the cover and the reticle automatically turns back on.
- The ROMEO3MAX PRO has 15 brightness settings, 13 daylight and 2 night vision. While the sight is ON, increase the brightness of the reticle by pressing and releasing the ▲ (UP) brightness button until the desired brightness level is reached. To decrease the brightness, press and release the ▼ (DOWN) brightness button. The reticle will blink 5 times when the highest or lowest setting is reached.

INSTALLATION

**WARNING****UNLOAD/CLEAR**

BEFORE WORKING ON YOUR ROMEO3MAX PRO SIGHT, ALWAYS ENSURE THAT THE FIREARM IS UNLOADED AND CLEARED WITH THE SAFETY ON AND POINTED IN A SAFE DIRECTION. FAILURE TO COMPLY COULD RESULT IN INJURY OR DEATH.

MOUNTING THE SIGHT

The ROMEO3MAX PRO is designed to mount to any firearm or mount that uses the SIG PRO mounting footprint. Remove any pistol optic cover plate from the pistol slide (refer to your firearm operator's manual). Ensure the mounting surface and threaded mounting holes are clean and free from any oil, debris, or threadlocker compound. Set the ROMEO3MAX PRO onto the mounting surface, lining up any protruding recoil bosses or pins in the mounting surface with the recoil lug witness holes in the bottom of the optic. Thread the mounting screws through the optic mounting screw holes and into the threaded holes in the mounting surface. Alternate tightening each screw while keeping forward pressure on the optic housing (toward the muzzle) and torque the mounting screws to 24 in-lbf. If mounting to an aluminum mount surface or adapter plate, see that manufacturer's torque spec recommendation.

SIGHT ADJUSTMENTS AND ZEROING

Elevation Adjustments – The elevation adjustment screw is located on top of the rear deck of the optic, just behind the mount screw holes. To raise your point of impact, use the supplied multi-tool or any small flat blade screwdriver to turn the adjustment screw counterclockwise. To lower your point of impact, turn the adjustment screw clockwise. Each click of the adjustment screw is equal to 1.0 MOA.

Windage Adjustments – The windage adjustment screw is located on the right side of the optic, just behind the battery tray. To move your point of impact right, use the supplied multi-tool or any small flat blade screwdriver to turn the adjustment screw counterclockwise. To move your point of impact left, turn the screw clockwise. Each click of the adjustment screw is equal to 1.0 MOA.

NOTE

The directional arrows near the adjustment screws indicate the direction your bullet impacts will move. They do not indicate the direction the reticle is moving.

Elevation Adjustment		
POI Up	↑	↻
POI Down	↓	↺
Windage Adjustment		
POI Left	←	↺
POI Right	→	↻

Zeroing – When mounted, the ROME03MAX PRO should be sighted in just like a rifle optic. A precise group (minimum 5 rounds) should be shot at a cardboard or paper target. Compare the Point of Aim (POA) you held on the target with the Point of Impact (POI) of the rounds on the target. Use the windage and elevation adjustments to bring the point of aim together with the point of impact. It is recommended that initial sight-in procedure be done with a paper target at 5-7 yards, before moving the target to greater distances for final zeroing.

MAINTENANCE



WARNING

UNLOAD/CLEAR



BEFORE WORKING ON YOUR ROMEO3MAX PRO SIGHT, ALWAYS ENSURE THE FIREARM IS UNLOADED AND CLEARED WITH THE SAFETY ON AND POINTED IN A SAFE DIRECTION. FAILURE TO COMPLY COULD RESULT IN INJURY OR DEATH.

CAUTION

ALWAYS BLOW DUST OR DEBRIS FROM LENSES PRIOR TO USING ANY CLOTH OR LENS PEN. FAILURE TO DO THIS MAY RESULT IN SCRATCHING OF THE LENSES.

- **Cleaning** – Keep glass lens clear by using a clean, soft lens cloth. To avoid scratches in the surface of the lens coatings, be sure to remove any brass particles, dirt, dust, or carbon buildup from the glass before wiping the surface. Use compressed air to blow away debris and a cotton swab lightly soaked in Isopropyl Alcohol to remove carbon. If the reticle appears blurry, use compressed air to blow any dust from the emitter area located between the 2 mount screw holes.
- When the optic is not in use, always use the provided sight cover to ensure that the lens remains scratch free.

TROUBLESHOOTING

POI Changes between groups when shooting from a single set distance

- Check that your mounting screws are torqued to the correct specification (see page 13).
- Check for variations in ammunition brand, bullet weight, and velocity specs.
- Check/clean your firearm.

Reticle not illuminated



- Press and hold the ▲ (UP) or ▼ (DOWN) brightness adjustment button for over 1 second. Continue to press and release the UP brightness adjustment button to make sure the illuminated reticle is not in one of the lowest illumination levels, which can be difficult to see in bright environments.
- Ensure the battery is installed properly (+ facing down).
- Replace the battery (see page 11).

Reticle appears blurry or distorted

- Use compressed air to blow any dust from the emitter area located between the 2 mount screw holes.

SPECIFICATIONS

MAGNIFICATION	1X
ILLUMINATION SETTINGS	13 Daytime / 2 NV
CLEAR APERTURE DIAMETER	31mm
OVERALL ELEVATION ADJUSTMENT RANGE	100 MOA
OVERALL WINDAGE ADJUSTMENT RANGE	100 MOA
WEIGHT WITH BATTERY	1.1 oz / 31g
BATTERY TYPE	CR1632
WATERPROOFING	IPX7

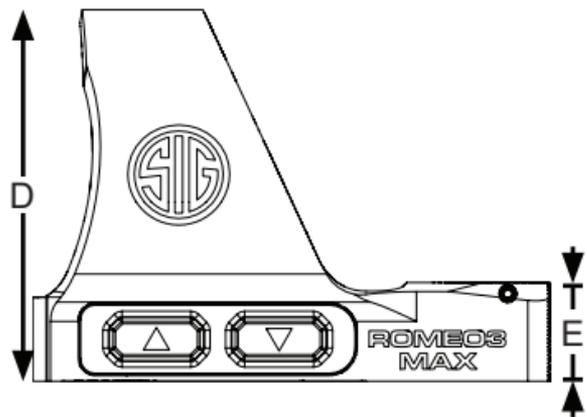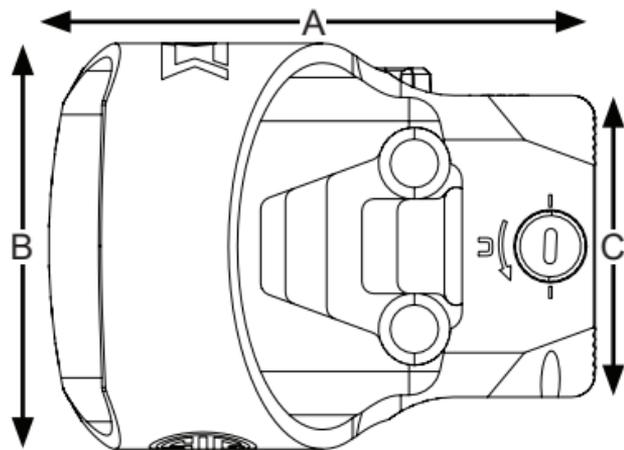

A – 1.83in / 46.5mm

B – 1.36in / 34.5mm

C – 1.0in / 25.4mm

D – 1.32in / 33.5mm

E – .35in / 8.9mm

SIG SAUER® INFINITE GUARANTEE®



SIG SAUER® has a history of quality and reliability that dates back more than 250 years. We understand the importance of true dependability whether it be in the line of duty, at the shooting range or on your next hunt and we continually strive to deliver products that meet and exceed the expectations of even the most demanding customers. That's why SIG SAUER is proud to offer our INFINITE GUARANTEE* on all our firearms, optics, and suppressors.

Our promise: We warrant that your new SIG SAUER firearm, optic, or suppressor was originally manufactured free of defects in material, workmanship, electrical, optical, and mechanical function. We will repair your SIG SAUER product in the event it becomes damaged or is defective in any way, at no charge to you. If we cannot repair your product, we will replace it or, if we cannot replace it, we will provide you with a replacement of equal value. All with no questions asked, forever.

SIG SAUER® Infinite Guarantee®

- Fully Transferable
- No Warranty Card Required
- No Receipt Required
- No Time Limit Applies
- No Charge

Please note that our Infinite Guarantee excludes coverage for intentional damage, misuse, cosmetic damage that does not affect the performance of the optic, loss, theft, or unauthorized repair or modification. Excludes Tritium components.

Customers seeking warranty coverage must first obtain a Return Merchandise Authorization (RMA) by contacting SIG SAUER Customer Service and return the product unloaded and freight prepaid.

ANY WARRANTIES IMPLIED BY LAW, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED IN DURATION TO THE DURATION OF THIS WRITTEN WARRANTY PERIOD. REPAIR, ALTERATION, OR REPLACEMENT AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY FOR ANY DEFECTIVE PRODUCT. IN NO EVENT SHALL SIG SAUER OR ANY COMPANY AFFILIATED WITH SIG SAUER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND ARISING OUT OF THE PURCHASE OR USE OF THIS PRODUCT, WHETHER BASED UPON CONTRACT, TORT, STATUTE, OR OTHERWISE. Some states do not allow the limitation of implied warranties, or the exclusion or limitation of incidental or consequential damages, so some or all of the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

This warranty applies to commercial customers only and does not apply to government, non-commercial, or non-US customers. Non-US COMMERCIAL CUSTOMERS MUST PURCHASE PRODUCT THROUGH AN AUTHORIZED SIG SAUER DEALER WITHIN THEIR COUNTRY OF RESIDENCE FOR THIS WARRANTY TO APPLY.

NOTES:

NOTES:



**FOR PRODUCT SERVICE ON THIS MODEL,
PLEASE CALL (603) 610-3000**

12100 SW TUALATIN RD, TUALATIN, OR 97062 USA

All trademarks, service marks, trade names, trade dress, product names and logos appearing in this manual are the property of their respective owners. No trademark or service mark appearing in this manual may be used without written consent of the mark's owner.