

SIG SAUER AIRSOFT/AIR GUN/AIR ACCESSORY LIMITED WARRANTY

SIG SAUER warrants that the enclosed AIRSOFT/AIRGUN/AIR ACCESSORY product was originally manufactured free of defects in material, workmanship, and mechanical function. For the applicable periods listed below, SIG SAUER agrees to correct any defect in the product for the original purchaser by repair, adjustment, or replacement, at SIG SAUER's option, with the same or comparable quality components (or by replacing the product at SIG SAUER's option); provided however, that the product is returned unloaded and freight prepaid to SIG SAUER at 18 Industrial Drive, Exeter, NH, 03833.

- Limited Warranty Applicable Periods:
- SIG SAUER® AIR ONE Airsoft Models – Thirty (30) days from date of purchase
 - SIG SAUER® PROFORCE Airsoft Models – Ninety (90) days from date of purchase
 - SIG SAUER® AIRGUN Models (non-HUNTER models) – One-hundred and eighty (180) days from date of purchase
 - SIG SAUER® HUNTER AIRGUN Models – One (1) year from date of purchase
 - SIG SAUER® AIR ACCESSORIES – Sixty (60) days from date of purchase

Proof of purchase will be required with any request for warranty repair. This limited warranty is null and void if the product has been misused, damaged (by accident or otherwise), fired with improper ammunition, fired with an obstruction in the barrel, damaged through failure to provide reasonable and necessary maintenance as described in the manual accompanying the product, or if unauthorized repair or any alteration, including of a cosmetic nature, has been performed on the product. This limited warranty does not apply to normal wear and tear of any parts. Subject to the foregoing, this limited warranty confers the right to have the covered product or its parts repaired, adjusted, or replaced exclusively upon the original purchaser, which right is not transferable to any other person.

ANY WARRANTIES IMPLIED BY LAW, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED. REPAIR, ALTERATION, OR REPLACEMENT AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY FOR ANY DEFECTIVE PRODUCT. IN NO EVENT SHALL SIG SAUER OR ANY COMPANY AFFILIATED WITH SIG SAUER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND ARISING OUT OF THE PURCHASE OR USE OF THIS PRODUCT, WHETHER BASED UPON CONTRACT, TORT, STATUTE, OR OTHERWISE. Some states do not allow the exclusion or limitation of implied warranties, or the exclusion or limitation of incidental or consequential damages, so some or all of the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

THIS WARRANTY APPLIES TO U.S. COMMERCIAL CUSTOMERS ONLY, AND DOES NOT APPLY TO GOVERNMENT, MILITARY, LAW ENFORCEMENT, OR NON-US CUSTOMERS. NON-US CUSTOMERS SHOULD CONTACT THEIR LOCAL DEALER OR DISTRIBUTOR FOR APPLICABLE WARRANTY COVERAGE.

BATTERY HAZARD WARNING

Battery manufacturers warn against mixing new and used batteries or different brand batteries together as this may increase the risk of leakage, fire or explosion. Do not, puncture, short-circuit, disassemble or heat batteries above 212°F (100°C). Do not recharge the batteries unless they are specifically designed as rechargeable batteries and then only in accordance with manufacturer's directions. **Lithium Batteries:** Industry wide there have been reported incidents of off-brand Lithium batteries exploding or catching fire creating serious consequences. SIG SAUER includes batteries from Duracell® and other well-known battery manufacturers with its products, and strongly urges you to only purchase replacement batteries from Duracell®, or other well-known battery manufacturers like Panasonic® and Rayovac®. These batteries are designed for use in high performance, high-drain devices, and their designs incorporate fault and heat protection for added safety. Use of inferior batteries may cause an explosion or fire, creating risk of damage to your device that will void the SIG SAUER warranty, cause damage to other property, and potentially serious injury or death.

CONTACT:

For questions concerning this product, please call Customer Service at 603-610-3000, option 1.

72 Pease Boulevard, Newington, NH 03801 • 603-610-3000
sigsauer.com



P/N 5701161 REV 00



OWNER'S MANUAL



AIR-R5: MINI RED DOT SIGHT

This Airgun Red Dot Sight is a versatile and lightweight sighting solution for Airguns. A parallax free 1X red dot with 3 MOA reticle, coated glass lenses, and anodized aluminum nitrogen filled body construction ensures optimal performance in the most extreme conditions.

CONTENTS

- AIR-R5 Mini Red Dot Sight
- Owner’s Manual
- (1) AAA Battery
- Allen key



FEATURES

- Digital Push Button (On/Off Switch with Dot Intensity Settings)
- 18 Brightness Settings
- Ambient Light Sensor
- Windage & Elevation Adjustments
- Rainproof
- Fog Proof
- Nitrogen filled body
- Integrated Picatinny Rail Mount

INSTRUCTIONS

Install battery:

- Unscrew battery cover, using thumb & forefinger
- Insert battery with the positive end first
- Reattach battery cover, tighten completely to o-ring with thumb & forefinger

Mounting on Airgun:

- To mount on Picatinny accessory rail:
- Loosen locking bolts using provided allen key.
 - Mount on rail, and secure by tightening locking bolt.



Power ON/OFF and Dot Intensity Adjustment:

Turn ON the AIR-SIGHT-MRD-20R by pushing once on the power switch. The brightness of the dot is at first set in AUTO mode by the ambient light sensor on top of the sight. Should the dot intensity need to be adjusted manually, push one more time on the power switch to bypass the light sensor and then adjust by pressing down on the dot intensity UP or DOWN button till desired intensity is set. The next time the sight is turned on, dot intensity will remain at previous setting till power switch is pressed one more time to switch into AUTO mode. To turn power OFF, keep pressing down on the power switch till the sight is OFF. Power will shut down automatically in two hours in the event that one forgets to turn power off.

Zeroing, Windage and Elevation Adjustments

⚠ CAUTION: SINCE ZEROING INVOLVES ACTUAL SHOOTING OF PELLETS, IT SHOULD BE DONE AT AN APPROVED SHOOTING RANGE OR EQUALLY SAFE AREA. BE SURE TO USE EYE AND EAR PROTECTION WHEN SHOOTING.

Unscrew counterclockwise and take off the cover of Windage/Elevation screw. Use a screw driver or coin to adjust point of impact by turning the screw in the direction as needed. Each click of the adjustment screw moves the dot by 1” at 100yards (by ½” at 50yards).

STORAGE

When not in use, use included lens cover to protect the lens. Always keep the sight in clean and dry place. When the sight is not going to be used for long period of time, take out the battery. Should the lens get dusty or dirty, use soft lens cloth to wipe clean.