 




# **SIGSAUER®**

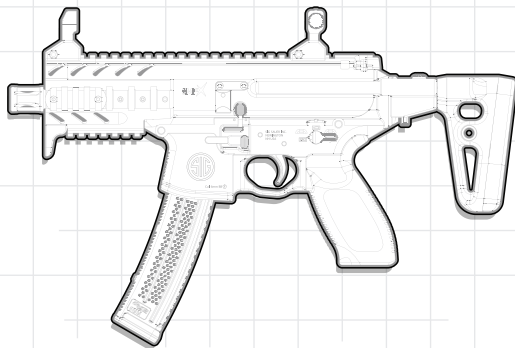

## ***MPX SPRING AIRSOFT RIFLE***

### ***OPERATOR'S MANUAL: HANDLING & SAFETY INSTRUCTIONS***



READ THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL CAREFULLY BEFORE USING THIS AIRSOFT GUN. DO NOT DISCARD THIS MANUAL.

THIS MANUAL SHOULD ALWAYS ACCOMPANY THIS AIRSOFT GUN AND BE TRANSFERRED WITH IT UPON CHANGE IN OWNERSHIP, OR WHEN THE AIRSOFT GUN IS PRESENTED TO ANOTHER PERSON.



# WARNINGS

## 1.0 SAFETY WARNINGS

READ THIS OWNER'S MANUAL COMPLETELY. DO NOT BRANDISH OR DISPLAY THIS AIRSOFT GUN IN PUBLIC. IT MAY BE CONFUSING TO PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK THIS AIRSOFT GUN IS A FIREARM. DO NOT USE OR CARRY THE AIRSOFT GUN IN SITUATIONS WHERE IT COULD BE MISTAKEN FOR A FIREARM. THIS AIRSOFT GUN IS NOT A TOY. TREAT IT WITH THE SAME RESPECT YOU WOULD A FIREARM. ALWAYS CAREFULLY FOLLOW THE SAFETY DIRECTIONS FOUND IN THIS OWNER'S MANUAL AND KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE USE. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY, ESPECIALLY TO THE EYE. THE USE AND PURCHASE OF THIS AIRSOFT GUN IS NOT RECOMMENDED FOR PERSONS UNDER 18 YEARS OF AGE.

## THE BASIC RULES OF SAFE AIRSOFT GUN HANDLING

ALWAYS treat every Airsoft gun as if it were loaded.

ALWAYS point the Airsoft gun in a safe direction. DO NOT point any Airsoft gun, loaded or unloaded, at any undesired target.

ALWAYS be sure of your backstop, what lies beyond, and the safety of bystanders before you shoot.

ALWAYS keep your finger clear of the trigger until ready to fire.

DO NOT brandish, tamper with, or attempt to alter Airsoft gun in any way. Actions may result in injury, especially to the eye.

NEVER alter or remove the orange tip or any safety markings on the Airsoft gun.

ALWAYS use clean, dry, ammunition of the proper type and caliber for your Airsoft gun. Never reuse ammunition.

ALWAYS be sure you and those around you wear proper eye protection when shooting.

ALWAYS carry your Airsoft gun so that you can control the direction of the muzzle if you fall or stumble.

NEVER shoot at a flat surface or water to avoid ricochet.

DO NOT leave a loaded Airsoft gun unattended. Airsoft guns and ammunition should be stored separately, locked if possible, beyond the reach of children, careless adults, and unauthorized users.

NEVER allow your Airsoft gun to be used by anyone who has not read and understood this operator's manual.

ALWAYS be sure that the barrel is clear of any obstruction.

NEVER drink alcoholic beverages or take drugs before or during shooting, as your vision and judgment could be seriously impaired, making your Airsoft gun handling unsafe.

### 1.1 EYE PROTECTION



ALWAYS WEAR SAFETY GLASSES THAT MEET THE REQUIREMENTS OF AMERICAN NATIONAL STANDARDS INSTITUTE/INTERNATIONAL SAFETY EQUIPMENT ASSOCIATION (ANSI/ISEA) Z87.1 OR EUROPEAN STANDARD (EN) 166 WHEN HANDLING, PRACTICING, OR PLINKING WITH AN AIRSOFT GUN. WHEN TRAINING OR USING IN FIELD EVENTS AND COMPETITIONS, PROPER EYE AND FACE PROTECTION DESIGNED FOR AIRSOFT GUNS MUST BE WORN BY THE USER AND ANY PERSON WITHIN RANGE.

### 1.2 PROP 65 WARNING



CANCER AND REPRODUCTIVE HARM [WWW.P65WARNINGS.CA.GOV](http://WWW.P65WARNINGS.CA.GOV)

## TABLE OF CONTENTS

1.0 SAFETY WARNINGS.....	2
2.0 PRODUCT DESCRIPTION.....	5
3.0 SAFETY/SELECTOR SWITCH.....	6
4.0 LOADING MAGAZINE.....	7
5.0 FIRING THE RIFLE.....	9
6.0 OPERATING STOCK.....	10
7.0 USE & MAINTENANCE.....	12
8.0 STORAGE & TRANSPORTATION.....	13
9.0 SERVICE / SHIPPING POLICY.....	14
10.0 WARRANTY INFORMATION.....	15

## 2.0 PRODUCT DESCRIPTION

1. Buttstock
2. Stock Adjustment Release
3. Charging Handle
4. Rear Sight
5. Picatinny Rail
6. Front Sight
7. Muzzle
8. Barricade Handstop
9. Picatinny Rail(s)
10. Magazine
11. Magazine Release
12. Trigger
13. Pistol Grip
14. Safety/Selector Switch
15. Stock Detachment Release



### 3.0 SAFETY/SELECTOR SWITCH



**SAFE**



**FIRE**



**FIRE**

The safety is controlled using the selector switch. The switch is ambidextrous so the safety can be engaged with either the right or left hand switch.

Moving the selector switch into either the semi-auto or full-auto positions will disengage the safety so the rifle can be fired. However, since this is a spring powered rifle, it must be cocked before every shot and is incapable of firing semi or full-auto.

## 4.0 LOADING MAGAZINE



The magazine is equipped with a reservoir which must be filled in order to load the magazine. To fill the reservoir, open the loading port door **(A)** located on the top rear of the magazine and pour BB's in until it is full. Once the reservoir is full, push the loading port door closed until it snaps back in place and is flush with the back of the magazine.

Pull the follower **(B)** on the front of the magazine all of the way down to the bottom of its channel and hold it (the follower will not lock). This will open the passage between the reservoir and the ready tube on the front of the magazine.



Tilt the magazine to allow BB's from the reservoir to roll through the passage at the bottom of the magazine and into the ready tube. This may require tilting the magazine back and forth a few times until the ready tube is full. Once full, release the follower which will prevent the BB's from rolling back into the reservoir. The magazine is now loaded and can be inserted into the rifle.



 
## 5.0 FIRING THE RIFLE



Keep the muzzle pointed in a safe direction. Insert the loaded magazine firmly into the magwell of the rifle until it locks in place. Pull back on the charging handle until you hear a click, and then allow it to return forward. This will cock the rifle and load a BB into the chamber. The rifle is now ready to fire. Aim the rifle at your target and rotate the selector switch to the fire position. Squeeze the trigger to the rear and the rifle will fire.



Repeat the above process to continue shooting. Once all BB's have been fired from the magazine, the rifle will make a different sound when fired and no BB will be seen firing from the barrel. Press the magazine release button to remove the magazine and reload BB's.

## 6.0 OPERATING STOCK

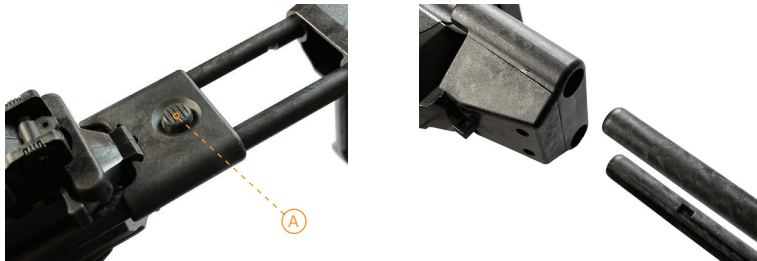

This rifle is equipped with a telescoping stock with 3 locking positions (collapsed, half extended, fully extended). To adjust the buttstock, depress the round button on the top of the stock **(A)** to unlock it and then move the buttstock slightly in the direction you wish to adjust it before releasing the button. Then, continuing moving the stock in that direction and the lock will automatically engage once the buttstock reaches the locking point.

  If the button is held down and the buttstock is continued to be pulled to the rear, it will pull completely out of its base. To reinstall, simply depress the button and slide the buttstock back into the base of the stock before releasing the button.

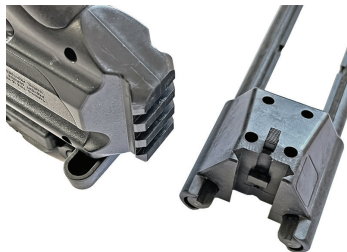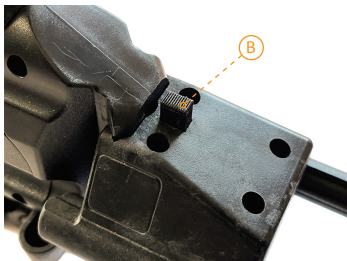

The stock assembly attaches to a picatinny style rail at the rear of the receiver and can be removed completely if desired. This is accomplished by first adjusting the stock to the fully extended position and then depressing the square button **(B)** on the underside of the stock base to unlock it.

Once unlocked, the stock can slide vertically up or down off the rail to remove it. To reinstall, simply depress the square button again and slide the stock back onto the rail from either direction. Release the button and move the stock slightly in either direction vertically until the button locks in place.

## 7.0 USE & MAINTENANCE

**WARNING:** FOR USE WITH 6MM AIRSOFT BB's ONLY. USE OF ANY OTHER AMMUNITION MAY RESULT IN INJURY, OR DAMAGE TO THE AIRSOFT GUN. DO NOT REUSE AMMUNITION. TO ACHIEVE OPTIMUM ACCURACY AND PERFORMANCE, USE 6MM AIRSOFT BB's WHICH ARE SEAMLESS, POLISHED AND WEIGHING .20g. AVOID USING "BULK" BB's AS THEY ARE TYPICALLY LOW QUALITY AND CAN DAMAGE YOUR AIRSOFT GUN.

**CAUTION:** DO NOT DRY FIRE YOUR AIRSOFT GUN, UNLESS REQUIRED FOR A SAFETY/FUNCTION CHECK. EXCESSIVE DRY FIRING WITHOUT BB'S WILL PUT INCREASED STRESS ON THE FIRING MECHANISM WHICH CAN RESULT IN DAMAGE TO THE SPRING PISTON AND INTERNAL COMPONENTS.

**CAUTION:** DO NOT LUBRICATE YOUR AIRSOFT GUN WITH ANY PETROLEUM BASED LUBRICANTS. PETROLEUM BASED LUBRICANTS WILL DAMAGE THE PLASTIC AND RUBBER COMPONENTS OF YOUR AIRSOFT GUN. ONLY USE 100% SILICONE LUBRICANT INTENDED FOR AIRSOFT GUN MAINTENANCE.

**CAUTION:** IF THERE IS A JAM OR OBSTRUCTION IN THE BARREL, NEVER ATTEMPT TO SHOOT ANOTHER BB. DOING SO CAN CAUSE PERMANENT DAMAGE TO THE AIRSOFT GUN. STOP FIRING IMMEDIATELY, ENGAGE THE SAFETY AND REMOVE THE MAGAZINE BEFORE CLEARING THE OBSTRUCTION. ONLY USE A PLASTIC CLEARING ROD TO REMOVE JAMS. USE OF METAL CLEARING RODS CAN CAUSE PERMANENT DAMAGE TO THE BARREL.

## 8.0 STORAGE AND TRANSPORTATION

When storing your spring powered Airsoft gun, ensure that it is no longer cocked and that it is unloaded. Store it separate from your ammunition and in places inaccessible to children and unauthorized persons, under lock and key if possible. When storing always be aware of the Airsoft gun and equipment associated with the product.

Never store your Airsoft gun in damp climate as this can cause corrosion on the metal components. Be aware of high and low temperatures (32°F/0°C to 90°F/32°C) as parts/equipment such as the piston, seals, etc. can be affected and/or damaged. Never store your Airsoft gun near a heat source such as a furnace, boiler or radiator.

When transporting your Airsoft gun, keep it unloaded and on safe for your safety and for the safety of others. It is always recommended to transport your Airsoft gun in a case or container to protect it and keep the Airsoft gun out of public view.

It is your responsibility to familiarize yourself with the laws of any state you will be traveling through with your Airsoft gun.

## 9.0 SERVICE / SHIPPING POLICY

If you have questions concerning the performance or servicing of your Airsoft gun, please write or call:

SIG SAUER, Inc.  
Attention: Customer Service  
18 Industrial Drive, Exeter, NH 03833

Phone: (603) 610-3000 ext. 1  
Fax: (603) 766-7002

IF YOU DO NOT UNDERSTAND THE INSTRUCTIONS FOR OPERATING YOUR AIRSOFT GUN, IT IS YOUR RESPONSIBILITY TO CALL OUR CUSTOMER SERVICE DEPARTMENT AT (603) 610-3000 EXT. 1 BEFORE USING YOUR AIRSOFT GUN.

In the event that you need to return your Airsoft gun to the SIG SAUER Service Department, here's what to do:

1. Contact Customer Service at (603) 610-3000 ext. 1 for a return merchandise authorization (RMA) number, which will allow SIG SAUER to track the status of your return from its receipt at SIG SAUER through its return to you. Please do not send your Airsoft until you obtain an RMA number.
2. Make sure that the chamber and magazine(s) are unloaded and that no ammunition is included with your returned Airsoft gun.
3. Package the Airsoft gun securely to prevent damage. Enclose a letter that includes your name, street address, daytime phone number, model and serial number, and a detailed description of the problem you have experienced or the work that you want performed. With the exception of extra magazines, do not include any other accessories such as scopes or mounts.
4. SIG SAUER is not responsible for any Airsoft gun until it is received, nor for damage incurred during shipment.

5. Ship your Airsoft gun insured and prepaid (we do not accept collect shipments) to:

SIG SAUER, Inc.  
Attention: Service Department  
18 Industrial Drive Exeter, NH 03833

Don't forget to write your RMA number on the package.

A copy of this instruction manual should always accompany this Airsoft gun and be transferred with it upon change of ownership.

## 10.0 WARRANTY INFORMATION

### SIG SAUER AIRSOFT/AIR GUN/AIR ACCESSORY LIMITED WARRANTY

SIG SAUER warrants that the enclosed AIRSOFT/AIRGUN/AIR ACCESSORY product was originally manufactured free of defects in material, workmanship, and mechanical function. For the applicable periods listed below, SIG SAUER agrees to correct any defect in the product for the original purchaser by repair, adjustment, or replacement, at SIG SAUER's option, with the same or comparable quality components (or by replacing the product at SIG SAUER's option); provided however, that the product is returned unloaded and freight prepaid to SIG SAUER at 18 Industrial Drive, Exeter, NH, 03833.

#### Limited Warranty Applicable Periods:

- SIG SAUER® AIR ONE Airsoft Models – Thirty (30) days from date of purchase
- SIG SAUER® PROFORCE Airsoft Models – Ninety (90) days from date of purchase

- SIG SAUER® AIRGUN Models (non-HUNTER models) – One-hundred and eighty (180) days from date of purchase
- SIG SAUER® HUNTER AIRGUN Models – One (1) year from date of purchase
- SIG SAUER® AIR ACCESSORIES – Sixty (60) days from date of purchase

Proof of purchase will be required with any request for warranty repair.

This limited warranty is null and void if the product has been misused, damaged (by accident or otherwise), fired with improper ammunition, fired with an obstruction in the barrel, damaged through failure to provide reasonable and necessary maintenance as described in the manual accompanying the product, or if unauthorized repair or any alteration, including of a cosmetic nature, has been performed on the product. This limited warranty does not apply to normal wear and tear of any parts.

Subject to the foregoing, this limited warranty confers the right to have the covered product or its parts repaired, adjusted, or replaced exclusively upon the original purchaser, which right is not transferable to any other person.

ANY WARRANTIES IMPLIED BY LAW, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED. REPAIR, ADJUSTMENT, OR REPLACEMENT AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY FOR ANY DEFECTIVE PRODUCT. IN NO EVENT SHALL SIG SAUER OR ANY COMPANY AFFILIATED WITH SIG SAUER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND ARISING OUT OF THE PURCHASE OR USE OF THIS PRODUCT, WHETHER BASED UPON CONTRACT, TORT, STATUTE, OR OTHERWISE. Some states do not allow the exclusion or limitation of implied warranties, or the exclusion or limitation of incidental or consequential damages, so some or all of the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State-to-State.

THIS WARRANTY APPLIES TO U.S. COMMERCIAL CUSTOMERS ONLY, AND DOES NOT APPLY TO GOVERNMENT, MILITARY, LAW ENFORCEMENT, OR NON-US CUSTOMERS. NON-US CUSTOMERS SHOULD CONTACT THEIR LOCAL DEALER OR DISTRIBUTOR FOR APPLICABLE WARRANTY COVERAGE.





**sigsauer.com**

**SIG SAUER, Inc.  
72 Pease Boulevard, Newington, NH 03801 USA**

All trademarks, service marks, trade names, trade dress, product names and logos appearing in this manual are the property of their respective owners. No trademark or service mark appearing in this manual may be used without written consent of the mark's owner.