



PADDLE ADJUSTMENT ALLEN HEAD SCREW
(Applies only to Retention Paddle Holster)

**TRIGGER GUARD
LOCKING LEVER**
(Applies only to
Retention Paddle Holster)

PADDLE

Specifications are subject to change without notice.

WARRANTY STATEMENT

SIG SAUER® warrants that our holsters and magazine pouches are free from defect in parts and workmanship for the lifetime of the original owner. At our discretion, we will repair, replace, or refund your original purchase price of this product if it is determined to be defective. Normal wear and tear is not covered, nor is damage resulting from abuse, neglect, or altering this product from its original state. SIG SAUER offers a 10-year limited warranty in any country or under any jurisdiction where specific restrictions exist on limited lifetime warranties.

HOLSTER / MAG POUCH

SAFETY WARNINGS AND INSTRUCTIONS

⚠ WARNING: Read and understand entire manual before using this product.

Improper or careless use of a firearm or a firearm and holster may result in serious injury or death. It is the user's responsibility to have a thorough knowledge of and be properly trained in all aspects of firearm and holster safety and use.

- Do not place a loaded handgun in a holster without first testing the holster for proper fit with the handgun in an unloaded condition.
- Do not carry any handgun with a round in the chamber unless you have received professional training in the use of the handgun and holster and are willing to assume responsibility and risk (including accidental discharge) of carrying a loaded handgun.
- When drawing a handgun from the holster or replacing it in the holster, do not place your finger in the trigger guard, or near the trigger. Position your trigger finger adjacent to, but away from, the trigger and, if possible, support the tip of your finger on the front of the trigger guard.
- When putting the handgun in the holster, always place your thumb over the hammer or behind the slide.
- Never holster any semi-automatic handgun in a single-action mode (except handguns which are single action only).
- Do not attempt to cock a holstered handgun as this can cause severe damage to the handgun or holster or both and may contribute to an accidental discharge.
- Always place your hand on the handgun and holster when running or performing other vigorous activities.
- Sitting, standing, walking, running, jumping and any other physical activities can cause sudden movements of the gun and the holster.
- If the gun is not properly secured by means of the latching device, it could become dislodged or fall out causing injury and possibly death to the user and others.
- Always protect an exposed magazine release button from an accidental depression.
- Do not use any customized, modified, worn or broken handguns or those that are not of original manufacturer's specifications in a SIG SAUER® holster.

- Do not, in any way, modify, disassemble or remove any part from this holster, unless approved by SIG SAUER®.
- Do not expose the holster to extreme heat conditions.
- Do not leave the holster in the trunk of any vehicle during extremely hot weather.
- Do not rely on any holster being “snatch proof”. There is no such holster. Rely only on extensive proper training and vigilance.
- It is the user’s responsibility to properly maintain the holster regularly, checking ejection port components for proper function.

▲ FAILURE TO HEED THESE WARNINGS OR FOLLOW THE OPERATING INSTRUCTIONS MAY RESULT IN ACCIDENTAL DISCHARGE OF A HANDGUN CAUSING SERIOUS INJURY OR DEATH.

Read and understand all owner’s manuals, instructions, and guides prepared by the manufacturer for your handgun prior to use.

SIG SAUER holsters are designed to carry specific handguns. Before use, be sure the holster selected is designed to carry corresponding handgun. If there is any doubt, do not use the holster. If you have any questions, contact SIG SAUER Customer Service at (603) 610-3000 ext. 1. Carrying a handgun in an ill-fitting or improper holster can result in serious injury or death.

The purchase and use of this SIG SAUER holster is at the sole and exclusive risk of the user.

▲ ADDITIONAL WARNINGS

It is important to note that most man-made products may eventually “wear out” or become unsuitable for the function for which they were designed. Stress and strain placed on any given holster will vary according to usage; therefore it is difficult to indicate a recommended replacement date for this product. It is the user’s responsibility to assure, after use, that the holster is able to continue service within its design parameters.

It is the user’s responsibility to inspect the holster daily for signs of excessive wear, or loss of retention of the handgun, and tightness of all hardware. If any possible problem is detected or any doubt exists, do not use. If you have any questions, contact SIG SAUER Customer Service at (603) 610-3000 ext. 1.

OPERATING INSTRUCTIONS - HOLSTER

Step 1: In order to draw a handgun from a SIG SAUER holster, it is necessary to install the holster on a pair of pants or trousers. This holster is equipped with a paddle, designed to hold the holster outside the trouser waist band. The holster is angle adjustable (Applies only to Retention Paddle Holster).

Step 2: (Applies only to Retention Paddle Holster.) To adjust the holster / paddle angle, loosen the Allen head screw, rotate the paddle to the desired position, and securely tighten the Allen head screw. The holster should be adjusted so the butt of the pistol is elevated above the barrel and never in the butt down position. The paddle flexes and allows the user to easily insert the paddle on the inside of the garment. This can be accomplished by using a rotating motion to insert and remove. The firearm should be removed from the holster before attaching or removing the holster from your clothing.

Step 3: Insert an unloaded handgun straight down into the holster. When you are placing the handgun in the holster, do not place your finger in the trigger guard, or near the trigger. Position your trigger finger adjacent to but away from the trigger and, if possible, support the tip of your finger on the front of trigger guard. While inserting the handgun in the holster, always place your thumb over the hammer or behind the slide. You should be certain the handgun is thoroughly seated in the holster with the trigger guard lock engaged (Applies only to Retention Paddle Holster).

Step 4: (The following applies only to Retention Paddle Holster) To draw your handgun, obtain a shooting grip. Use your index finger to depress the trigger guard locking lever enough for the weapon to clear. Draw the handgun straight up. A bit of resistance should be encountered until the handgun is released from the holster.

OPERATING INSTRUCTIONS - MAGAZINE POUCH

Due to the physical characteristics of various pistol magazines, they should be checked for proper tension within the compartment of the case while fully loaded. Invert the magazine and with the feed lips downward, push the magazine into the compartment that forms the body of the case until it stops. Do this several times to ensure proper and consistent fit. The removal should be smooth and the case should release the magazine freely and without drag.

▲ CAUTION: Prior to wearing the holster on duty, the user must accomplish a draw from a fully secured holster in less than two seconds while under simulated stress or a life-threatening situation. Have a partner time your surprise command to a completed draw. Thus, the holster should not be used with a loaded handgun or on duty until the under two- second drawing standard indicated above is accomplished by the user.

▲ CAUTION: Should the holster continue to bind or remain tight, cease use immediately. If you have any questions, contact SIG SAUER® Customer Service at (603) 610-3000 ext. 1.

▲ CAUTION: Practice and training as prescribed in this manual are mandatory prior to using the holster on duty. Do not use a loaded handgun during practice and training. Practice using the holster with an unloaded handgun until you are thoroughly competent and proficient in its safe use.