SIG_{SAUER}

ROMEOZero-ELITE

PREMIUM MICRO REFLEX SIGHT. AUTO OFF

OPERATORS MANUAL

INTRODUCTION:

The ROMEOZero-ELITE, AUTO-OFF is a fast, accurate micro reflex sight that offers rapid target acquisition and a long list of premium features, at an iron sight price.

(AUTO-OFF) and constant-on modes

reduction in bright environments

Integrated rear backup sight

coin cell battery

SPECIFICATIONS

Brightness Settings

Weight w/o Battery or

E. Backup Rear Sight F. Battery Slot

Battery Life

Shroud

Battery

Objective Lens Diameter

Overall Windage Adjustment

Overall Elevation Adjustment

D.Brightness Adjustment Button

E

Anti-reflection grooves on all rear surfaces for glare

Highly efficient point source LED emitter, for up to 20,000 hours of runtime from a common CR1632

Protective shroud with structurally enhanced design for upgraded durability included

The ROMEOZero-ELITE, AUTO OFF is covered by the SIG SAUER INFINITE GUARANTEE®.

KEY FEATURES:

- ELITE model fits all Industry standard ROMEOZero/ Shield™ RMSc footprints
- A 3 MOA Red Dot Emitter
- Molded glass aspheric lens with high performance coatings for superior light transmittance and zero
- distortion
- Carbon Infused ultralight polymer housing
- 8 user-selectable brightness levels User-selectable 16-hour automatic reticle shutoff


CONTENTS:

- ROMEOZero-ELITE Micro Open Reflex Sight
- (2) M4 x 0.7 x 10.62 Mounting Screws (2) M4 x 0.7 x 9.04 Mounting Screws
- (2) M4 x 0.7 x 10.04 Mounting Screws (2) M3 x .5 x 12 Mounting Screws
- .050" Allen Wrench (Windage/Elevation
- Adjustment) 2mm Allen Wrench (Mounting Screws)
- Steel Protective Shroud
- CR1632 Battery
- Die Cut Chemical Shield Decal

PRODUCT IDENTIFICATION:

A. Windage Adjustment Screw

- B. Elevation Adjustment Screw
- C.Mount Screw Holes

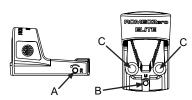





24mm

CR1632

50 MOA

50 MOA

8 Daytime Settings

Up to 20,000 hours

0.5 oz / 14 grams

INSTALLATION:

IMPORTANT: Prior to installation, battery change, cleaning or maintenance, ensure that the firearm is unloaded with the safety on and pointed in a safe direction. CAUTION! DO NOT REMOVE THE PLASTIC SEAL DECAL UNDERNEATH THE OPTIC THAT CONTAINS THE SERIAL NUMBER. DOING SO MAY DAMAGE THE

PRODUCT. The ROMEOZero-ELITE comes with 4 sets of mounting screws (some models only). Each set of screws is meant for a specific application, and using the incorrect screws can cause

malfunctions or damage to the optic or the firearm. M3 x 0.5 x 12, Part # 7402476 (Figure 1): These screws are meant to mount the ROMEOZero-ELITE directly to a SIG SAUER P365 pistol slide with smaller M3 threaded optic mount holes. These screws can be identified by the short shoulder with no machined grooves.

M4 x 0.7 x 10.62, Part # 7402072 (Figure 2): These screws are meant to mount the ROMEOZero-ELITE to any pistol slide or mount with a traditional Leupold® Delta Point® Pro or Shield RMS-c footprint along with P365 pistol slides that have larger M4 threaded optic mount holes (such as FUSE). These screws can be identified by the tall shoulder with no machined grooves.

M4 x 0.7 x 9.04, Part # 7403032 (Figure 3): These screws are meant to mount the ROMEOZero-ELITE (without shroud) to pistols with shallow mount holes, such as the Springfield® Hellcat® OSP™ and GLOCK® 43X MOS. These screws can be identified by the tall shoulder with 3 machined grooves.

M4 x 0.7 x 10.04, Part # 7403049 (Figure 4): These screws are meant to mount the ROMEOZero-ELITE (with shroud) to pistols with shallow mount holes, such as the Springfield Hellcat OSP and GLOCK 43X MOS. These screws can be identified by the tall shoulder with 2 machined grooves.

Before attempting to install the ROMEOZero-ELITE, first thread the mounting screws directly into the mounting holes of the pistol or accessory mount, to ensure the screws thread properly into the mounting holes.

MOUNTING DIRECTLY TO AN OPTICS-READY PISTOL SLIDE: Remove any cover plate from the optic cut area of the pistol slide (consult the firearm operator's manual). Use a clean dry cloth to wipe any oil or residue area of the pistol slide (consult the firearm operator's manual). Use a clean dry cloth to wipe any oil or residue from the optic cut area. Use a cotton swab lightly soaked in isopropyl alcohol to wipe any excess oil or solvent out of the threaded optic mounting holes in the pistol slide. If mounting to a P365X/XL slide, first apply the included Die Cut Chemical Shield Decal to the optics cut area. This will keep gas and debris from flowing up through the hole in the pistol slide to the optic. Ensure that a new CR1632 battery is installed in the optic, with the positive (+) side facing out, toward the pistol slide. Hold the battery in place while lowering the optic onto the optic cut of the pistol slide. If using the steel protective shroud, place the optic (with battery installed) into the shroud before lowering it onto the pistol slide (Figure 5). Line up the mounting holes in the optic with the threaded mounting holes in the pistol slide using a 2mm Allen wrench. While firmly pushing the optic forward on the mounting surface (toward the muzzle) turn the screws clockwise until the tapered screw heads make firmly pushing the optic forward on the mounting surface (toward the muzzle) turn the screws clockwise until the tapered screw heads make firml pushing the optic forward on the mounting surface (toward the muzzle) turn the screws clockwise until the tapered screw heads make firml pushing the optic forward on the mounting surface (toward the muzzle) turn the screws clockwise until the tapered screw heads make firml pushing the optic forward on the mounting holes in the pistol slide using a 2mm Allen wrench. While firmly pushing the optic forward on the mounting surface (toward the muzzle) turn the screws clockwise until the tapered screw heads make firml pushing the optic forward on the mounting holes in the pistol slide the muzzle) turn the screws clockwise until the tapered screw heads make firml pushing the optic forward on the mounting holes in the pistol slide head the pushing the op the mounting surface (toward the muzzle), turn the screws clockwise until the tapered screw heads make firm contact with the optic housing. Then turn an additional 3/4 of a turn. For best results, use an inch-pound torque wrench set to 9 in-lbf. NOTE: You should re-torque the mount screws to 9 in-lbf. each time you remove and reinstall the sight, and after every 500 rounds fired.

AUTION! OVER-TORQUING THE MOUNTING SCREWS MAY CAUSE ISSUES WITH THE WINDAGE AND ELEVATION ADJUSTMENTS. USE AN INCH-POUND TORQUE WRENCH SET TO 9 IN-LBS FOR BEST RESULTS WHEN MOUNTING THE OPTIC.

















OPERATION:

INSTALLING AND CHANGING THE BATTERY:

The optic must be removed from the firearm to access the battery. The CR1632 coin cell battery is installed from underneath the sight. Insert the battery into the round battery slot with the positive (+) side facing out, toward the pistol slide, and temporarily hold it in place using a thumb or finger until you're ready to mount the sight onto the firearm.

MODE CHANGE: This model of ROMEOZero-ELITE has 2 available modes - AUTO-OFF and CONSTANT-ON. To switch between modes or to check which mode the optic is in, from ON: press and hold the brightness adjustment button for 3 seconds. The reticle will first turn off briefly, then come back on and begin blinking. A slow blink indicates AUTO-OFF mode, and a faster blink indicates CONSTANT-ON mode. A single press of the button while the reticle is blinking will switch between modes. After 10 seconds without a button press, the mode that is being displayed will be locked in and the reticle will stop blinking. This setting will be saved even if the optic is turned off or the battery is removed. AUTO-OFF: This model of ROMEOZero-ELITE utilizes an auto-off feature. Once the optic has been on constantly for 16 hours, the reticle will automatically shut off to conserve battery life. The optic must be turned back on manually using the

button behind the lens. **CONSTANT-ON:** Once the reticle is turned on, it will remain on constantly until the user manually turns the optic off. The optic must be turned back on manually using the button behind the lens. WARNING: CONSTANT-ON mode will severely reduce battery life if the optic is left in the ON state, especially at high brightness levels.

LOW BATTERY WARNING: Upon turning the optic ON from the OFF state, if the battery has

approximately 24 hours or less of life left, the reticle will indicate this by slowly fluctuating from dim to

bright back to dim repeatedly for approximately 7 seconds. The battery should be replaced with a fresh

CR1632 battery as soon as possible

REAR BACKUP SIGHT: The ROMEOZero-ELITE features a molded backup rear sight. Due to the wide variety of pistol optics-cut slides and front sight heights, the rear sight notch on the ROMEOZero-ELITE may or may not line up correctly with the firearm front sight.

WINDAGE AND ELEVATION ADJUSTMENT:

NOTE - The illuminated reticle of the ROMEOZero-ELITE has been adjusted to mechanical center at the factory. Therefore, the optic will be close to zeroed when installed on an optic-ready pistol, and should only require minor adjustment to bring point of aim and point of impact together.

ADJUSTING ELEVATION:

To raise your point of impact, use the included 0.50" Allen wrench to turn the elevation screw clockwise. To lower your point of impact, turn the adjustment screw counterclockwise.

ADJUSTING WINDAGE:

To move your point of impact left use the included 0.50" Allen wrench to turn the windage screw clockwise. To move your point of impact right, turn the adjustment screw counterclockwise.

CAUTION! DO NOT ADJUST THE WINDAGE OR ELEVATION ADJUSTMENTS WHILE THE OPTIC IS REMOVED FROM THE PISTOL OR MOUNT SURFACE. DOING SO MAY CAUSE DAMAGE TO THE OPTIC. NEVER FORCE THE ADJUSTMENT SCREWS BEYOND THEIR LIMITS OF TRAVEL.

CLEANING & MAINTENANCE:

After repeated fire, the lens may become clouded with gunpowder residue. For best results, it is recommended that the outer surface of the lens (the side closest to the muzzle) be cleaned, along with the firearm, after each use. To clean the lens, follow these steps:

1. With firearm pointed in a safe direction, unload and clear firearm of all ammunition.

- 2. Use compressed air to blow away any debris from lens.
- 3. Dampen the end of a cotton swab with isopropyl alcohol.
- 4. Apply dampened swab to lens and polish in a small circular pattern, beginning in the center and moving out to the edges.

If the optic is mounted on a pistol that gets carried inside or underneath clothing on a regular basis, it is possible to collect clothing fibers or lint in the emitter area, causing a temporary loss or change in appearance of the red dot. With the firearm unloaded with the safety on and pointed in a safe direction, use compressed air to blow out the emitter area, located on top of the sight, between the mount screw holes. The optic should never be submerged or flushed with cleaning solvents.

TROUBLESHOOTING

POINT OF IMPACT CHANGES BETWEEN GROUPS, WHILE SHOOTING FROM A SET DISTANCE:

- · Check that the mounting screws are torqued to 9 in-lbs.
- Check for variations in your ammunition
- Check/clean your firearm

SIGHT WILL NOT TURN ON:

Install a fresh CR1632 coin cell battery. Press and hold the brightness adjustment button for at least 2 seconds. It is also possible that the sight is on but set at a low brightness setting. Move to a dark room to see if the illuminated dot is turned down to a low setting, and use the brightness adjustment button to raise the dot brightness.

ILLUMINATED RETICLE SUDDENLY CHANGES SHAPE OR BECOMES BLURRY:

· Use compressed air to blow out the emitter area, located on top of the sight, between the two mount screw holes

WARNING: CANCER AND REPRODUCTIVE HARM—www.P65warnings.ca.gov





SIG SAUER® Infinite Guarantee™

SIG SAUER® has a history of quality and reliability that dates back more than 250 years. We

Sig SAUER@ has a history of quality and reliability that dates back more than 250 years. We understand the importance of true dependability whether it be in the line of duty, at the shooting range or on your next hunt and we continually strive to deliver products that meet and exceed the expectations of even the most demanding customers. That's why SIG SAUER is proud to offer our INFINITE GUARANTEE* on all our firearms, optics, and suppressors. Our promise: We warrant that your new SIG SAUER firearm, optic, or suppressor was originally manufactured free of defects in material, workmanship, electrical, optical, and mechanical function. We will repair your SIG SAUER product in the event it becomes damaged or is defective in any way, at no charge to you. If we cannot repair your product, we will replace it or, if we cannot replace it, we will provide you with a replacement of equal value. All with no questions asked, forever.

SIG SAUER® INFINITE GUARANTEE

- Fully Transferable
 - No Warranty Card Required No Receipt Required
 - No Time Limit Applies
- No Charge

cosmetic damage Please note that our Infinite Guarantee excludes coverage for intentional damage, misuse, that does not affect the performance of the optic, loss, theft, or unauthorized repair or modification. Excludes Tritium components.

Customers seeking warranty coverage must first obtain a Return Merchandise Authorization (RMA) by contacting SIG SAUER Customer Service and return the product unloaded and freight prepaid.

WARRANTIES IMPLIED BY LAW, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED IN DURATION TO THE DURATION OF THIS WRITTEN WARRANTY PERIOD. REPAIR, ALTERATION, OR REPLACEMENT AS PROVIDED IS YOUR EXCLUSIVE REMEDY FOR ANY DEFECTIVE PRODUCT. IN NO EVE INI NT SHAL SALIER OR ANY COMPANY AFFILIATED WITH SIG SALIER BE LIABLE FOR ANY SPECIAL INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND ARISING OUT OF THE PURCHASE OR USE OF THIS PRODUCT, WHETHER BASED UPON CONTRACT, TORT, STATUTE, OR OTHERWISE. Some states do not allow the limitation of implied warranties, or the exclusion or limitation of incidental or consequential damages, so some or all of the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

This warranty applies to commercial customers only and does not apply to government, non-commercial, or non-US customers. Non-US COMMERCIAL CUSTOMERS MUST PURCHASE PRODUCT THROUGH AN AUTHORIZED SIG SAUER DEALER WITHIN THEIR COUNTRY OF RESIDENCE FOR THIS WARRANTY TO APPLY.

FOR PRODUCT SERVICE ON THIS MODEL. PLEASE CALL 603-610-3000 12100 SW Tualatin Rd, Tualitin, OR 97062 USA P/N 7405372-01 REV00

