


SIGSAUER®

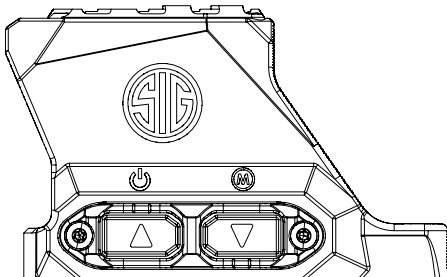

XRAY5™

ADVANCED RED DOT SIGHT

OPERATOR'S MANUAL



**READ THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL
CAREFULLY BEFORE USING THIS OPTIC.**

For the full XRAY5 User Experience, download the free SIG Sauer XRAY5 App by scanning this QR code.



EXPERIENCE
XRAY5

CONTENTS

Introduction	5
Contents.	6
Key Features	7
XRAY5 Product Identification	8
Button Battery Warning Information.	17
Operation	19
Installation.	23
Mounting The Sight	23
Mounting Screw Application Table	26
Sight Adjustments And Zeroing	46
LightFight™	51
Maintenance	52
Troubleshooting	53
Specifications	54
SIG SAUER® Infinite Guarantee®	60

Introduction

Designed, developed, tested, and assembled in the USA, the XRAY5 Advanced Red Dot Sight combines several revolutionary technologies and features into a rugged and incredibly capable pistol optic.

The XRAY5 starts with a fully enclosed and argon-purged optical system built within a robust 7075 Aluminum housing. The traditional emitter on carrier-plate system has been replaced with a state-of-the-art emitter matrix that features 225 individual LED pixels. Windage and elevation adjustments are done electronically (Digital Zero™), with no moving parts inside the optic, resulting in extreme durability. The ZDO™ (Zero Distortion Optical System) moves the glass aspheric lens from the front of the optic to the roof, giving the shooter a perfectly flat and crystal-clear sight picture without any distortion. Advanced features like a Round Counter, LightFight™ and User Profiles can be controlled via the XRAY5 App, while proven industry-leading technologies like MOTAC™ (Motion Activated Illumination Control) and D.A.R.C. (Dark Adaptive Reticles and Coatings) give the XRAY5 user an unparalleled advantage.

The XRAY5 is covered by the SIG SAUER Infinite Guarantee.

CONTENTS

- XRAY5 Advanced Red Dot Sight
- CR2032 Battery
- Mounting Screws
- Battery Cap Keychain Driver
- Mounting Screw Installation Tool
- LensPen® Cleaning Tool
- Recoil Pins (some models)
- Threadlocker (some models)
- XRAY5 Quick Start Card

Scan the QR code to visit sigbauer.com where you will find additional information about SIG SAUER products, SIG SAUER Academy and the SIG Experience Center, special programs, and additional support.






KEY FEATURES

- A fully enclosed, sealed, and argon-purged optical system providing ultimate protection from the elements.
- 7075 Aluminum housing and Grade 5 Titanium Lens Shield top cover.
- Extremely low deck height, allowing a full sight picture and co-witness with standard height sights.
- A 225-pixel (15x15) LED emitter matrix with no internal moving parts for ultimate durability and protection from zero shift.
- Digital Zero™ system featuring toolless electronic windage/elevation adjustments.
- ZDO™ (Zero Distortion Optical System), with roof-mounted glass aspheric lens for a completely flat and distortion-free sight picture.
- LightFight™ technology, allowing a compatible FOXTROT LF weapon light to automatically raise the brightness of the XRAY5 reticle when activated.
- Side-mounted CR2032 battery compartment with threaded battery cap for easy battery changes without removing the optic from the firearm.
- 15 brightness settings (13 Daylight / 2 NV).
- Minimum battery runtime of up to 10,000 hours at medium brightness setting.
- MOTAC (Motion Activated Illumination) that powers up when it senses motion and powers down when it does not.
- D.A.R.C. (Dark Adaptive Reticles & Coatings) technology provides ideal reticle brightness and target clarity while using GEN3+ night vision devices.
- XRAY5 App available from the App Store – Access features like Round Counter, User Profiles, Digital Zero, LightFight, Auto Shutoff, Battery Level Monitor, etc.
- Designed, developed, tested, and fully assembled in the USA.
- SIG SAUER Infinite Guarantee®.

XRAY5 PRODUCT IDENTIFICATION




XRAY5 SIG-LOC PRO

- A — ▲ (Up) Brightness Adjustment (Press and Release) and Power ON/OFF (Press and Hold)
- B — ▼ (Down) Brightness Adjustment (Press and Release) and ZERO MODE (Press and Hold)
- C — Battery Cap
- D — Drain Port
- E — Front Window
- F — Rear Window
- G — Titanium Lens Shield
- H — Bluetooth® Cover
- I — Recoil Lug
- J — Mount Screw Hole
- K — Wedge

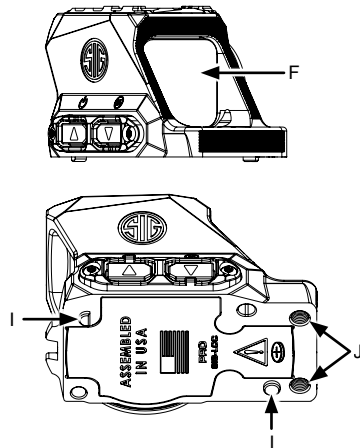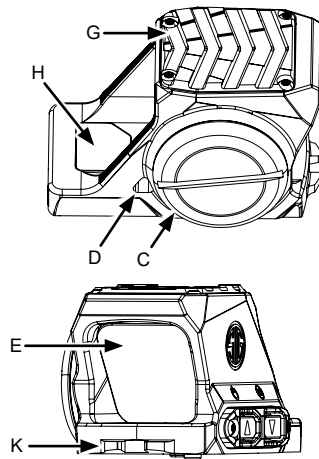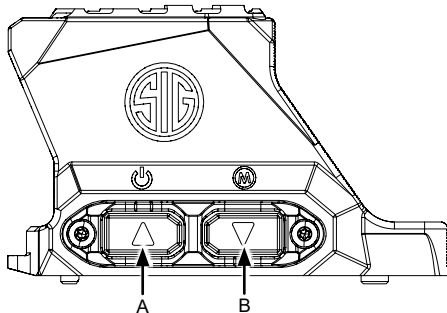




XRAY5 SIG-LOC COMPACT

- A — ▲ (Up) Brightness Adjustment (Press and Release) and Power ON/OFF (Press and Hold)
- B — ▼ (Down) Brightness Adjustment (Press and Release) and ZERO MODE (Press and Hold)
- C — Battery Cap
- D — Drain Port
- E — Front Window
- F — Rear Window
- G — Titanium Lens Shield
- H — Bluetooth Cover
- I — Recoil Lug
- J — Mount Screw Hole
- K — Wedge

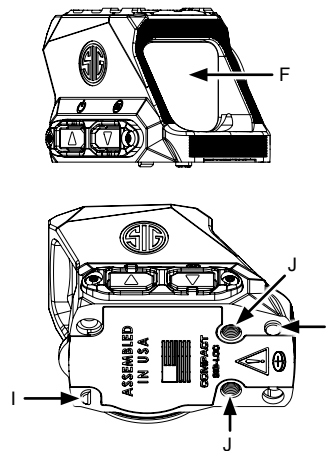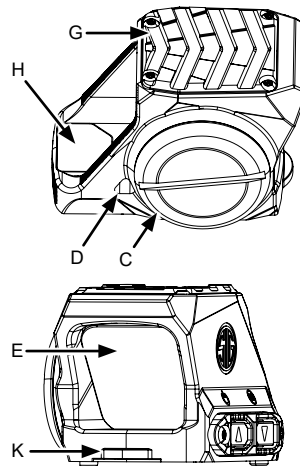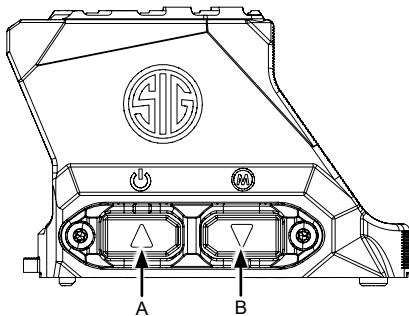






XRAY5 ENCLOSED PRO

- A — ▲ (Up) Brightness Adjustment (Press and Release) and Power ON/OFF (Press and Hold)
- B — ▼ (Down) Brightness Adjustment (Press and Release) and ZERO MODE (Press and Hold)
- C — Battery Cap
- D — Drain Port
- E — Front Window
- F — Rear Window
- G — Titanium Lens Shield
- H — Bluetooth Cover
- I — Recoil Lug Hole
- J — Mount Screw Hole

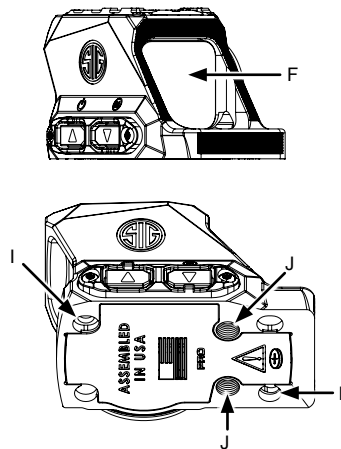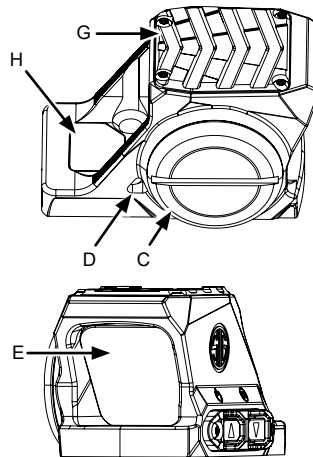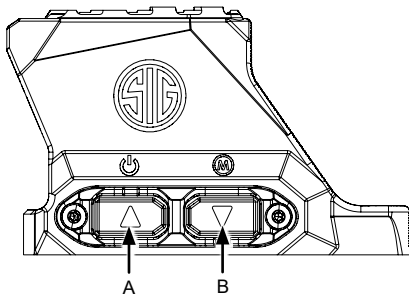

XRAY5 ENCLOSED COMPACT

- A — ▲ (Up) Brightness Adjustment (Press and Release) and Power ON/OFF (Press and Hold)
- B — ▼ (Down) Brightness Adjustment (Press and Release) and ZERO MODE (Press and Hold)
- C — Battery Cap
- D — Drain Port
- E — Front Window
- F — Rear Window
- G — Titanium Lens Shield
- H — Bluetooth Cover
- I — Recoil Lug Hole
- J — Mount Screw Hole

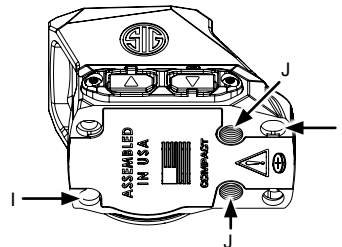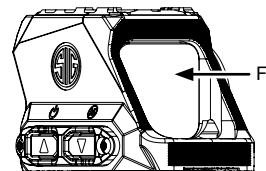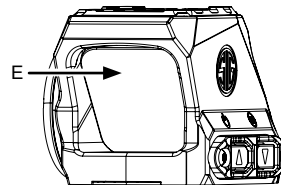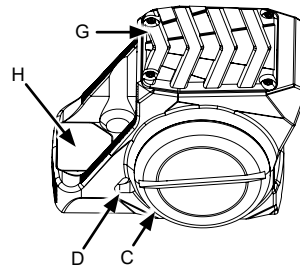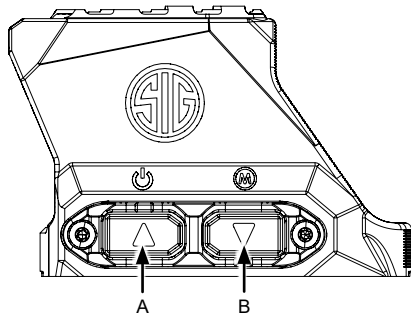


WARNING UNLOAD/CLEAR


BEFORE INSTALLING, REMOVING, OR ADJUSTING THE OPTIC, ALWAYS ENSURE THAT THE FIREARM IS UNLOADED AND CLEARED WITH THE SAFETY ON AND POINTED IN A SAFE DIRECTION. FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.

BUTTON BATTERY WARNING INFORMATION
⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Keep in original package until ready to use.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- For treatment information call, The National Battery Ingestion Hotline (NBH) 1–(800) 498–8666.

⚠ WARNING

- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Compatible battery: CR2032 Nominal voltage: 3V
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 212°F (100°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion, resulting in chemical burns.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

OPERATION


Installing the Battery

The battery cap is located on the right side of the optic and is threaded into the housing.

1. Using a properly sized flat blade tool in the slot, turn the battery cap counterclockwise to remove.
2. Install a fresh CR2032 coin cell battery with the positive (+) side facing out.
3. Install the battery cap by carefully threading it clockwise into the housing until it is tight against the housing. The proper torque value to install the battery cap is 10 in-lbf.

NOTE

Failure to properly torque the battery cap clockwise (CW) to 10 in-lbf could lead to ingestion hazard of coin battery, intermittent LED illumination, or allow moisture into the battery compartment. Periodically check the cap during use to ensure it is fully tightened.

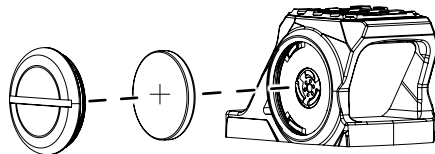

Turning Sight On and Off and Adjusting Brightness

- Manually turn the sight ON by pressing and holding the ▲ (UP) brightness button for over 1 second. Turn the sight OFF by repeating the same procedure.
- The XRAY5 features MOTAC (Motion Activated Illumination System). If the optic does not detect motion for 2 minutes, it automatically shuts off. The instant the optic detects motion, it powers on and returns to the last brightness setting that was in use. MOTAC can be turned ON/OFF in the XRAY5 app.

NOTE

Disabling MOTAC will severely reduce battery life.

NOTE

MOTAC is very sensitive to movement and will only turn the optic OFF if it remains completely motionless for at least 2 minutes. For maximum battery life, manually turn the optic OFF when storing it for long periods of time.

- The XRAY5 has 15 brightness settings: 13 daylight and 2 night vision. While the sight is ON, increase the brightness of the reticle by pressing and releasing the ▲ (UP) brightness button until the desired brightness level is reached. To decrease the brightness, press and release the ▼ (DOWN) brightness button. Each press of a brightness button will alter the brightness by one setting. The reticle will blink 5 times when the highest or lowest setting is reached. Lowest flashes are only visible using night vision devices.

Other Functions of the Control Buttons

Lock Out Mode:

- From ON, first choose the desired reticle brightness level, then press and hold the UP button for >7 seconds. The reticle will first turn off, then after 7 seconds a lock symbol will briefly appear in the optic window and the reticle will then be ON and in Lockout Mode. Any button press while in the Lockout Mode will only make the reticle blink to indicate it's locked. Button presses will not change reticle brightness, turn the optic ON/OFF, or get the optic into ZERO MODE, until the optic is unlocked.
- To unlock, repeat the same procedure (hold the UP button for 7 seconds). An unlock symbol will briefly appear in the optic window. Button presses will make the optic function normally.

Turn Bluetooth® ON/OFF:

- While the optic is turned OFF, press and hold the ▼ (DOWN) button for >5 seconds. The display will then turn ON and “BT-ON” will scroll on the screen if Bluetooth is ON, and “BT-OFF” will scroll on the screen if Bluetooth is OFF.
- When Bluetooth is turned OFF manually by using the control buttons on the optic, LightFight is disabled, and the XRAY5 Optic is undiscoverable to any devices.

Windage and Elevation Adjustment (ZERO MODE):

For detailed sight adjustment instructions, see page 46.

INSTALLATION**WARNING****UNLOAD/CLEAR**

BEFORE INSTALLING, REMOVING, OR ADJUSTING THE OPTIC, ALWAYS ENSURE THAT THE FIREARM IS UNLOADED AND CLEARED WITH THE SAFETY ON AND POINTED IN A SAFE DIRECTION. FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.

MOUNTING THE SIGHT**CAUTION**

FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS WILL RESULT IN THE SIGHT COMING LOOSE AND CAUSING DAMAGE TO SLIDE.



There are 4 unique footprints for the XRAY5. See the following illustrations to determine which model you have and if it is compatible with the pistol slide before proceeding to the appropriate mounting instructions.

Each of the XRAY5 optics are engraved with the name of the footprint on the bottom.


Top Mount Optics: See page 28

PRO Footprint (DELTAPOINT® PRO)


COMPACT Footprint (SHIELD RMSc™)

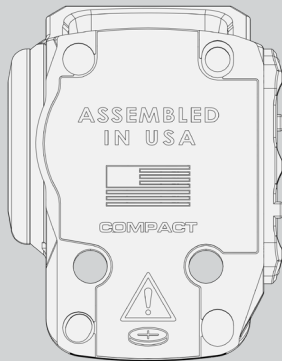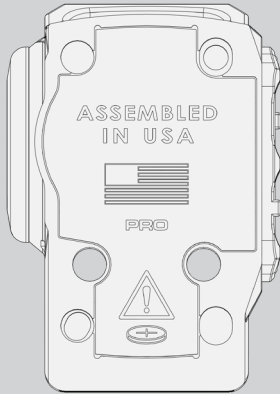

SIG-LOC PRO Footprint: See page 32

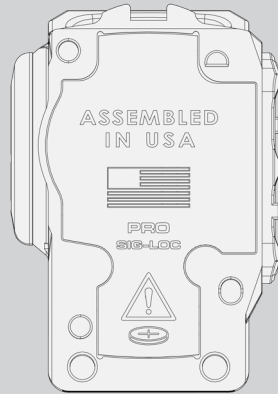

SIG-LOC COMPACT Footprint: See page 41

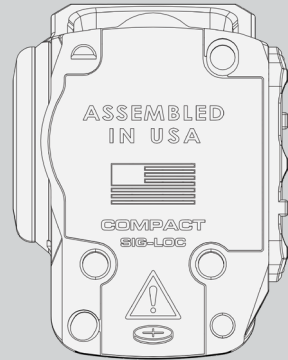

MOUNTING SCREW APPLICATION TABLE

The XRAY5 comes with mounting screws for the most common pistols in the industry. The mounting screws are labeled with the part number, and correspond to the following mounting applications and torque values:

SCREW PART NUMBER	SCREW SIZE	DRIVE	APPLICATION	TORQUE (INCH POUNDS)
7404261 (COMPACT models only)	M3X0.5-11.75MM	T10 TORX	SIG P365 WITH M3 SCREW HOLES	20
		T10 TORX	SIG P322	12
7404262	M4X0.7-9.25MM	T10 TORX	ANY DELTAPOINT PRO FOOTPRINT, P365 WITH M4 SCREW HOLES OR SIG PRO CUT SLIDES	28
7404786	M4X0.7-8.75MM	T10 TORX	GLOCK® MOS PISTOLS AND ADAPTER PLATES, SPRINGFIELD HELLCAT®	28
7405454	6-32X0.36IN	T10 TORX	S&W M&P®	20
7405000	M3X0.5MM	T10 TORX	SIG-LOC PRO	20
7405185	M3X0.5MM	T8 TORX	SIG-LOC COMPACT	18


NOTE

If mounting the XRAY5 to an aluminum slide, mount, or adapter plate, see the slide/mount/plate manufacturer's torque specifications. For other SIG SAUER optics-ready pistols not listed in the reference table, contact SIG SAUER Customer Service for mounting screw information, torque values, and mounting guidance.


Select the proper mounting screws and test them first to ensure they thread smoothly into the mounting surface holes. Set the XRAY5 onto the mounting surface, lining up any protruding recoil bosses in the mounting surface with the recoil lug witness holes in the bottom of the optic. Insert the mounting screws through the optic mounting screw holes and slowly thread them into the threaded holes in the mounting surface, while putting forward pressure (toward the muzzle) on the optic housing. Torque the mounting screws to the appropriate torque value. It is strongly recommended to use an inch-pound torque wrench.

Mounting Top Mount Optics


1. Field strip the firearm and remove the optic filler plate (1). See the host firearm's operator's manual.
2. Using a cotton swab lightly soaked in isopropyl alcohol, clean and degrease the threaded mounting holes.
3. Ensure the entire mounting surface (2) is clear of any debris, oil, or threadlocker.

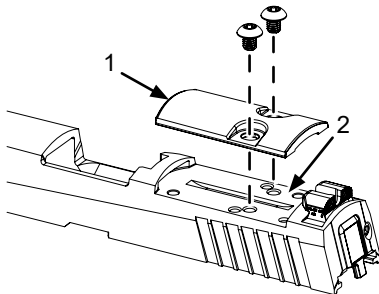


4. If equipped, ensure the loaded chamber indicator (LCI) (1) is properly installed in the slide.

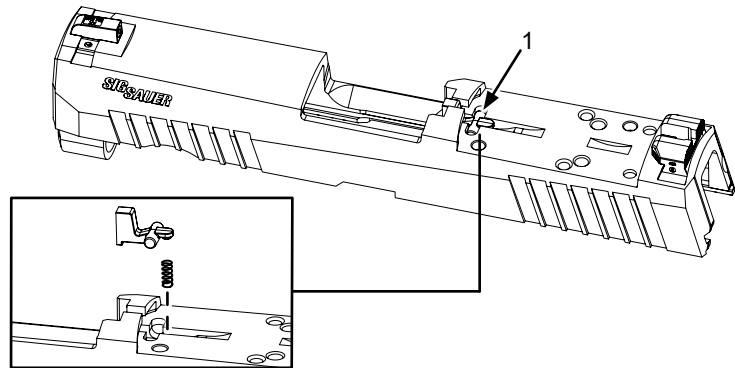

5. **SIG-LOC Pistol Slides Only:** If mounting a PRO or COMPACT top mount optic to a SIG-LOC slide, install the included SIG-LOC recoil pins (1) in the corresponding witness holes in the pistol slide.

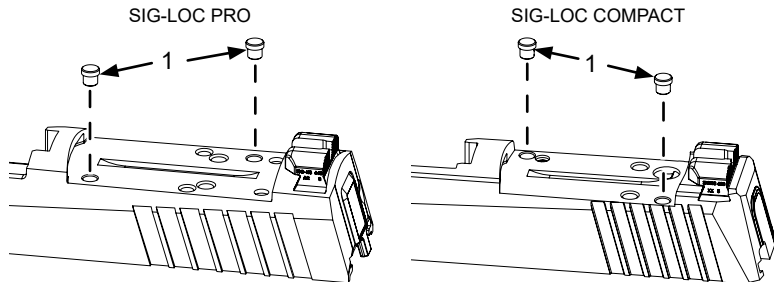

6. Install the optic (1) in the optic cut. Ensure that the optic fits properly over the screw holes and the SIG-LOC recoil pins (if applicable).
7. Locate the correct screws (2) for the slide and install the screw to the appropriate torque. See the table on page 26.

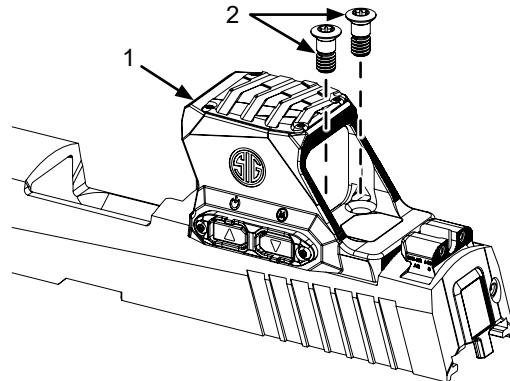


Mounting SIG-LOC PRO Optics

1. Field strip the firearm. See the host firearm's operator's manual.

NOTE

If the host firearm does not have an extractor plus pin as shown below, proceed to step 6.


2. Push in the extractor plus pin (1) at the rear of the slide.

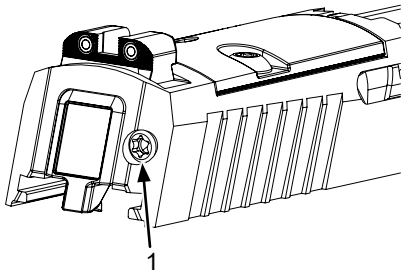


CAUTION

USE CAUTION WHEN DISASSEMBLING THE SLIDE AS SMALL PARTS CAN BECOME DISLODGED, DAMAGED, OR LOST.


3. Slide the rear cap (1) down and out of the slide while slightly pressing the extractor plus pin (2) inward.

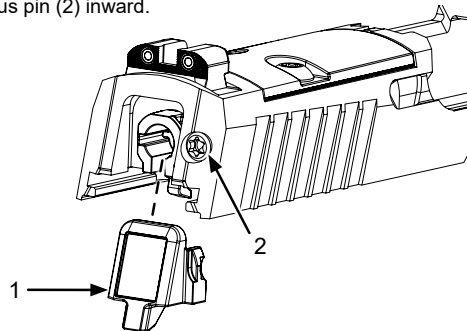


4. Remove the extractor plus pin (3), extractor spring (2), and extractor pin (1) from the slide.

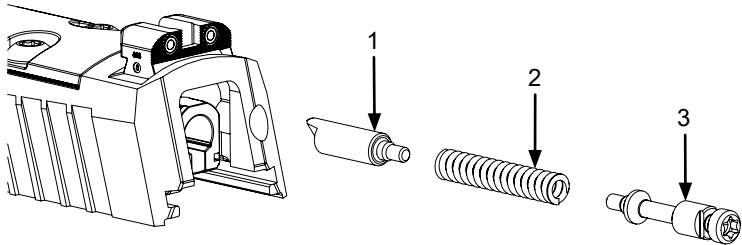


5. Remove the extractor (1) from the slide.

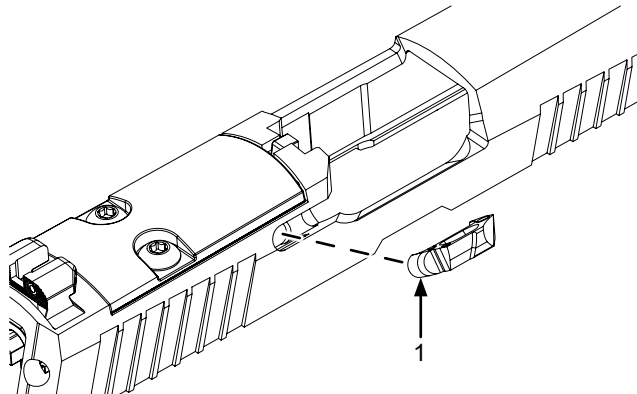

6. Use a T20 Torx® bit to remove the sight plate screws (1) from the slide.
7. Remove the sight plate (2) from the slide.
8. Using a cotton swab lightly soaked in isopropyl alcohol, clean and degrease the threaded mounting holes.
9. Ensure the entire mounting surface (3) is clear of any debris, oil, or threadlocker.

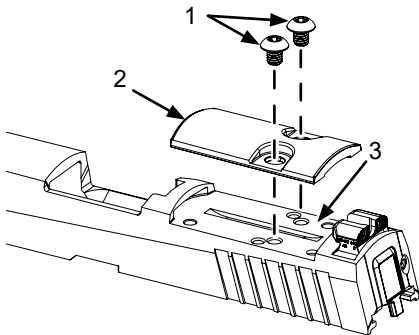


10. If equipped, ensure the loaded chamber indicator (LCI) (1) is properly installed in the slide.

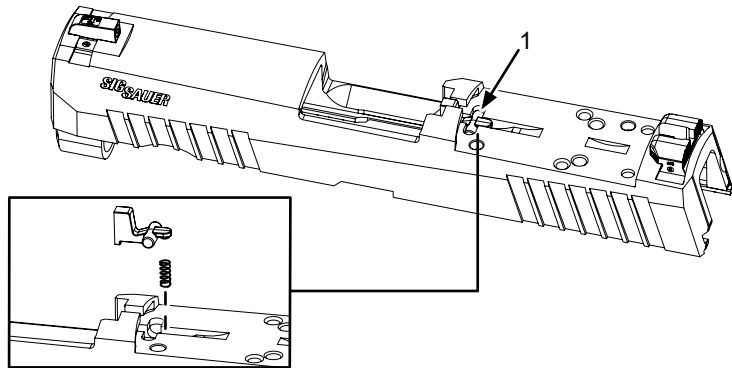


CAUTION

USE THE SUPPLIED SIGHT SCREWS. FAILURE TO DEGREASE THE SCREWS AND SIGHT THREADS BEFORE APPLYING THREADLOCKER WILL CAUSE THE SCREWS TO COME LOOSE. FAILURE TO FOLLOW THESE INSTRUCTIONS AND PROPERLY TORQUE SCREWS WILL RESULT IN DAMAGE TO COMPONENTS. THREADLOCKER MUST BE ALLOWED TO CURE FOR 24 HOURS PRIOR TO THE PISTOL BEING USED.


11. Make sure the threaded optic mounting holes (1) are free of debris and grease/oil. Apply a small drop of the supplied threadlocker to each threaded hole.

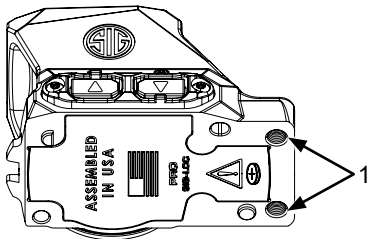

12. Insert the front wedge of the sight (2) into the cutout in the slide (1). Set the sight onto the slide ensuring the front recoil lug (6) seats in the front hole (4) and the rear recoil lug (5) seats in the rear hole (3) of the slide.

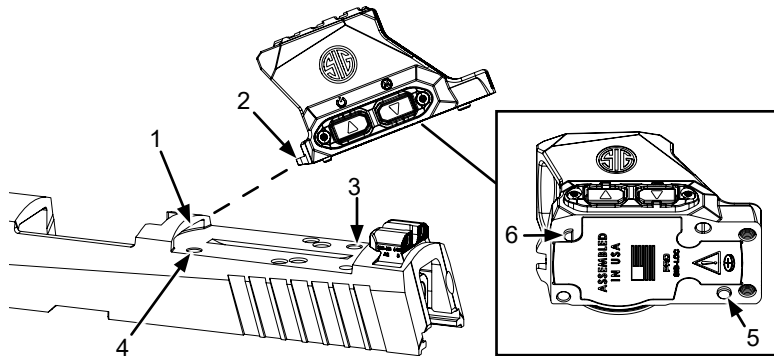


13. Degrease the optic mounting screw threads (2).
14. Using a T10 Torx, install new optic mounting screws (2) through the slide (1) into the optic housing then tighten to 20 in-lbf.

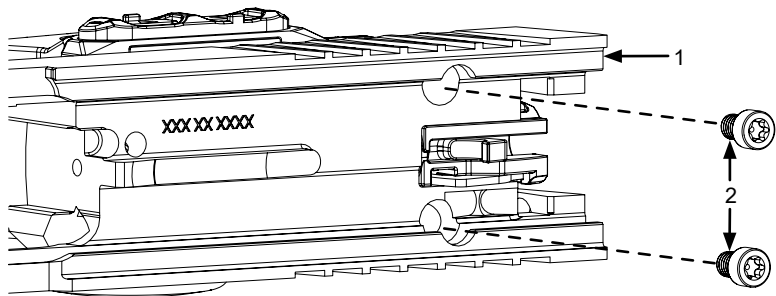


Mounting SIG-LOC COMPACT Optics

1. Field strip the firearm. See the host firearm's operator's manual.
2. Using a T10 drive bit, remove the sight plate screws (1), then the sight plate (2) from the slide.
3. Using a cotton swab lightly soaked in isopropyl alcohol, clean and degrease the threaded mounting holes.
4. Ensure the entire mounting surface (3) is clear of any debris, oil, or threadlocker.

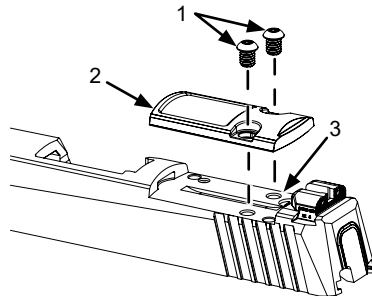


5. If equipped, ensure the loaded chamber indicator (LCI) (1) is properly installed in the slide.

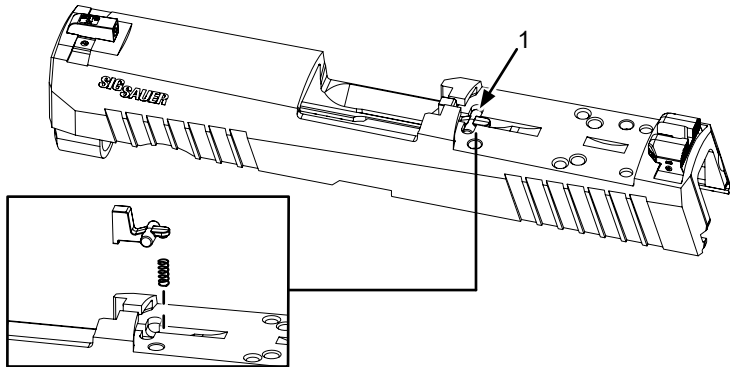


CAUTION

USE THE SUPPLIED SIGHT SCREWS. FAILURE TO DEGREASE THE SCREWS AND SIGHT THREADS BEFORE APPLYING THREADLOCKER WILL CAUSE THE SCREWS TO COME LOOSE. FAILURE TO FOLLOW THESE INSTRUCTIONS AND PROPERLY TORQUE SCREWS WILL RESULT IN DAMAGE TO COMPONENTS. THREADLOCKER MUST BE ALLOWED TO CURE FOR 24 HOURS PRIOR TO THE PISTOL BEING USED.


6. Make sure the threaded optic mounting holes (1) are free of debris and grease/oil. Apply a small drop of the supplied threadlocker to each threaded hole.

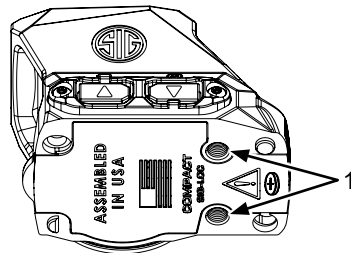

7. Insert the front wedge of the sight (2) into the cutout in the slide (1). Set the sight onto the slide ensuring the front recoil lug (5) seats in the front hole (3) and the rear recoil lug (6) seats in the rear hole (4) of the slide.

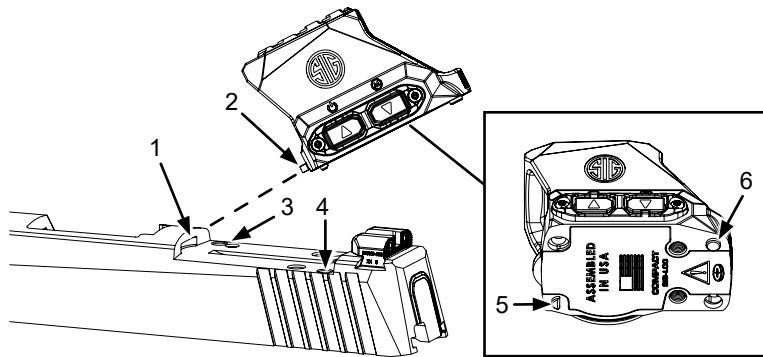

8. Degrease the optic mounting screw threads (2).
9. Using a T8 Torx, install new optic mounting screws (2) through the slide (1) into the optic housing then tighten to 18 in-lbf.

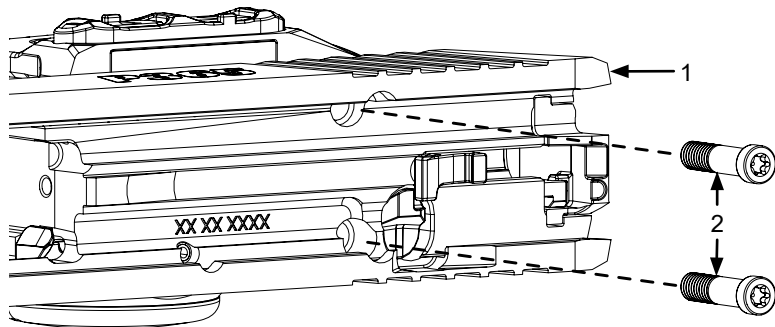

SIGHT ADJUSTMENTS AND ZEROING

The XRAY5 contains a 225-pixel emitter matrix that is fixed in place. Moving your point of impact is done by lighting up different pixels on the emitter matrix.

The XRAY5 windage and elevation adjustments can be controlled either manually via the 2 control buttons on the optic, or digitally from the XRAY5 app (preferred method). The following instructions are for zeroing the optic manually using the 2 optic control buttons.

NOTE

Each time you initially enter ZERO MODE, the starting position of the reticle is at the current Point of Impact, represented at zero (0). It does not start at the center dot of the 225-pixel red dot matrix. For example, if the current dot location is UP 2 and RIGHT 2 of the center dot, entering ZERO MODE will display this position as 0.

1. With the optic ON, press and hold the ▼ (DOWN) button for >5 seconds to enter ZERO MODE.

NOTE

While in ZERO MODE, if there are no button presses for 60 seconds, the optic will exit ZERO MODE and return the Point of Impact to the previous registered position. Any inputs that were made while in ZERO MODE without confirmation (as shown in step 5) will be cancelled.

2. ZERO MODE starts in ELEVATION UP mode. The optic display will indicate this with an UP (↑) icon, and the number 0. To raise the point of impact, press and release the ▲ (UP) button. The display will indicate the number of adjustments made (for example : U1 = UP 1, U2 = UP 2, etc.).
3. To cycle to the next adjustment mode, press and release the ▼ (DOWN) button. The XRAY5 ZERO MODE cycle is as follows:
ELEVATION UP, ELEVATION DOWN, WINDAGE LEFT, WINDAGE RIGHT.
4. Press and release the ▲ (UP) button to make adjustments in each mode.

NOTE

If you make too many adjustments in any direction while in ZERO MODE and want to come back the opposite direction, cycle to the opposite direction in the sequence using the ▼ (DOWN) button, then press the ▲ (UP) button until you have come back to the number you want.

- When finished making adjustments, press and hold the ▼ (DOWN) button for >3 seconds to register the changes to the Point of Impact. A check mark should appear to confirm the changes and the optic will return to normal function.


NOTE

After every registered change to your Point of Impact in ZERO MODE, confirm the new zero with shots on target.

Example Adjustment:

You enter ZERO MODE, and move three adjustments in the Up (U) direction, then decide to come back down two adjustments, to end at one (1) adjustment up from 0.

- Press and hold the ▼ (DOWN) button for >5 seconds to enter ZERO MODE.
- Press the ▲ (UP) button three times.
- Press the ▼ (DOWN) button ONE (1) time.
- Press the ▲ (UP) button two times.
- Press and hold the ▼ (DOWN) button for >3 seconds to register the changes to the Point of Impact.

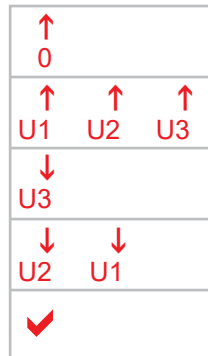

Zeroing

When mounted, the XRAY5 should be sighted in just like a rifle optic. A precise group (minimum 5 rounds) should be shot at a cardboard or paper target. For best results, use a stable rest such as a sandbag on a table or bench. Aim the XRAY5 reticle at the exact same spot on the target for all shots in the group. Compare the Point of Aim (POA) you held on the target with the Point of Impact (POI) on the target. Use the XRAY5 app Digital Zero feature to quickly and easily adjust your POI. You can also adjust windage and elevation using ZERO MODE via the 2 control buttons on the side of the optic (See page 46).

NOTE

Some pistol slide and iron sight configurations may allow a very close visual alignment between the optic and the pistol's iron sights (a co-witness) when properly zeroed. However, the optic reticle and the pistol iron sights are not intended to be used simultaneously while shooting. For best results, visually keep the optic reticle in the center of the glass window while focusing your eyes on the target out at the target distance.

LIGHTFIGHT™

LightFight™ is a revolutionary technology that allows a SIG SAUER Optic and a Weapon-Mounted flashlight to communicate. For the XRAY5 optic, LightFight is only available when paired with a compatible SIG SAUER FOXTROT LF (LightFight) model weapon light. When properly paired through the XRAY5 App, the XRAY5 reticle will automatically move to higher brightness when the FOXTROT LF is activated, preventing reticle “wash out” on target. For more information, see the XRAY5 App.

MAINTENANCE



WARNING

UNLOAD/CLEAR



BEFORE WORKING ON THE OPTIC, ALWAYS ENSURE THE FIREARM IS UNLOADED AND CLEARED WITH THE SAFETY ON AND POINTED IN A SAFE DIRECTION. FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.

CAUTION

ALWAYS BLOW DUST OR DEBRIS FROM LENSES PRIOR TO USING ANY CLOTH OR LENS PEN. FAILURE TO DO THIS MAY RESULT IN SCRATCHING OF THE LENSES.

- Cleaning – Keep front and rear glass window clear by using a clean, soft lens cloth or lens pen. To avoid scratches in the surface of the lens coatings, be sure to remove any brass particles, dirt, dust, or carbon buildup from the glass before wiping the surface. Use compressed air to blow away debris and a cotton swab lightly soaked in isopropyl alcohol to remove carbon.
- Replacing the battery – See page 19 of this manual.

TROUBLESHOOTING

POI Changes between groups when shooting from a single set distance

- Check that the mount screws are tightened to the proper torque. See page 26.
- Check for variations in ammunition brand, bullet weight, and velocity specs.
- Check/clean the firearm.

Reticle not illuminated

- Press and release the ▲ (UP) brightness adjustment button a few times to make sure the illuminated reticle is not in one of the lowest illumination levels, which can be difficult to see in bright environments.
- Ensure the battery is installed properly (+ side facing out).
- Make sure the battery cap is fully tightened by rotating the cap in the clockwise (CW) direction to 10 in-lbf.
- Replace the CR2032 battery. See page 19.

Button presses do not change reticle brightness

- The optic may be in lockout mode. See page 21.

XRAY5 cannot connect to the XRAY5 app

- The Bluetooth may be turned off. See page 22.

SPECIFICATIONS	PRO	COMPACT	SIG-LOC PRO	SIG-LOC COMPACT
OVERALL LENGTH	1.9 in / 48.2 mm	1.75 in / 44.2mm	1.9 in / 48.2 mm	1.75 in / 44.2mm
OVERALL HEIGHT	1.17 in / 29.7mm	1.2 in / 30.5mm	1.17 in / 29.7mm	1.2 in / 30.5mm
OVERALL WIDTH	1.32 in / 33.5mm	1.32 in / 33.5mm	1.32 in / 33.5mm	1.32 in / 33.5mm
WEIGHT WITH BATTERY	1.4 oz / 39.7 g	1.4 oz / 39.7 g	1.4 oz / 39.7 g	1.4 oz / 39.7 g
LENS TYPE	Asphere			
CLEAR APERTURE DIAMETER (Measured Diagonally)	24mm			
RETICLE	3.5 MOA DOT			
BATTERY TYPE	CR2032			
BATTERY ACCESS	SLOTTED THREADED CAP			
BATTERY RUNTIME	UP TO 10,000 HOURS (AT MEDIUM SETTING)			
EMITTER TYPE	225 (15X15) LED MATRIX			
OVERALL ELEVATION TRAVEL	80 MOA			
OVERALL WINDAGE TRAVEL	80 MOA			
BRIGHTNESS SETTINGS	15 (13 daylight, 2 NV)			
WATER RESISTANCE	IPX-8			
DROP RATING	3 DROPS, FROM 5 FEET (ONTO CONCRETE, MOUNTED TO 42 OZ WEIGHT)			

PAGE INTENTIONALLY LEFT BLANK

FCC STATEMENT

FCC ID: 2AP8SX5

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by SIG SAUER Inc. could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Sig Sauer Inc.
XRAY5

FCC ID: 2AP8SX5

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



WARNING: CANCER AND REPRODUCTIVE HARM—www.P65warnings.ca.gov



INDUSTRY CANADA:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's compliance with Industry Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Model: XRAY5
IC: 24032-X5

WEEE STATEMENT



Information for Users on Disposal of Old Equipment and Batteries

This symbol indicates that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at its end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your national legislation and the WEEE Directive 2012/19/EU.

By disposing of this product correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health, which could otherwise be caused by inappropriate waste handling of these products. For more information about these collection points and recycling of these products, please contact your local municipal office, your household waste disposal service, or the shop where you purchased the product. If you wish to send back this product for disposal, please visit our webpage: <https://www.sigsauer.com/optics-service-contact>



SIG SAUER® INFINITE GUARANTEE®

SIG SAUER® has a history of quality and reliability that dates back more than 250 years. We understand the importance of true dependability whether it be in the line of duty, at the shooting range or on your next hunt and we continually strive to deliver products that meet and exceed the expectations of even the most demanding customers. That's why SIG SAUER is proud to offer our INFINITE GUARANTEE* on all our firearms, optics, and suppressors.

Our promise: We warrant that your new SIG SAUER firearm, optic, or suppressor was originally manufactured free of defects in material, workmanship, electrical, optical, and mechanical function. We will repair your SIG SAUER product in the event it becomes damaged or is defective in any way, at no charge to you. If we cannot repair your product, we will replace it or, if we cannot replace it, we will provide you with a replacement of equal value. All with no questions asked, forever.

SIG SAUER® Infinite Guarantee®

- Fully Transferable
- No Warranty Card Required
- No Receipt Required
- No Time Limit Applies
- No Charge

Please note that our Infinite Guarantee excludes coverage for intentional damage, misuse, cosmetic damage that does not affect the performance of the optic, loss, theft, or unauthorized repair or modification. Excludes Tritium components.

Customers seeking warranty coverage must first obtain a Return Merchandise Authorization (RMA) by contacting SIG SAUER Customer Service and return the product unloaded and freight prepaid.

ANY WARRANTIES IMPLIED BY LAW, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED IN DURATION TO THE DURATION OF THIS WRITTEN WARRANTY PERIOD. REPAIR, ALTERATION, OR REPLACEMENT AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY FOR ANY DEFECTIVE PRODUCT. IN NO EVENT SHALL SIG SAUER OR ANY COMPANY AFFILIATED WITH SIG SAUER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND ARISING OUT OF THE PURCHASE OR USE OF THIS PRODUCT, WHETHER BASED UPON CONTRACT, TORT, STATUTE, OR OTHERWISE. Some states do not allow the limitation of implied warranties, or the exclusion or limitation of incidental or consequential damages, so some or all of the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

This warranty applies to commercial customers only and does not apply to government, non-commercial, or non-US customers. Non-US COMMERCIAL CUSTOMERS MUST PURCHASE PRODUCT THROUGH AN AUTHORIZED SIG SAUER DEALER WITHIN THEIR COUNTRY OF RESIDENCE FOR THIS WARRANTY TO APPLY.

NOTES:

NOTES:



**FOR PRODUCT SERVICE ON THIS MODEL,
PLEASE CALL (603) 610-3000**

12100 SW Tualatin Rd, Tualatin, OR 97062 USA

All trademarks, service marks, trade names, trade dress, product names, and logos appearing in this manual are the property of their respective owners. No trademark or service mark appearing in this manual may be used without written consent of the mark's owner.