




SIGSAUER®

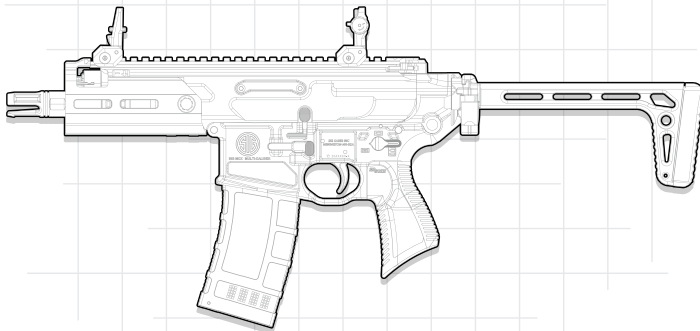

MCX RATTLER CO2 AIRSOFT RIFLE

OPERATOR'S MANUAL: HANDLING & SAFETY INSTRUCTIONS



READ THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL CAREFULLY BEFORE USING THIS AIRSOFT GUN. DO NOT DISCARD THIS MANUAL.

THIS MANUAL SHOULD ALWAYS ACCOMPANY THIS AIRSOFT GUN AND BE TRANSFERRED WITH IT UPON CHANGE IN OWNERSHIP, OR WHEN THE AIRSOFT GUN IS PRESENTED TO ANOTHER PERSON.



WARNINGS

1.0 SAFETY WARNINGS

READ THIS OPERATOR'S MANUAL COMPLETELY. DO NOT BRANDISH OR DISPLAY THIS AIRSOFT GUN IN PUBLIC. IT MAY BE CONFUSING TO PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK THIS AIRSOFT GUN IS A FIREARM. DO NOT USE OR CARRY THE AIRSOFT GUN IN SITUATIONS WHERE IT COULD BE MISTAKEN FOR A FIREARM. THIS AIRSOFT GUN IS NOT A TOY. TREAT IT WITH THE SAME RESPECT YOU WOULD A FIREARM. ALWAYS CAREFULLY FOLLOW THE SAFETY DIRECTIONS FOUND IN THIS OPERATOR'S MANUAL AND KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE USE. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY, ESPECIALLY TO THE EYE. THE USE AND PURCHASE OF THIS AIRSOFT GUN IS NOT RECOMMENDED FOR PERSONS UNDER 18 YEARS OF AGE.

THE BASIC RULES OF SAFE AIRSOFT GUN HANDLING

ALWAYS treat every AIRSOFT GUN as if it were loaded.

ALWAYS point the AIRSOFT GUN in a safe direction. DO NOT point any AIRSOFT GUN, loaded or unloaded, at any undesired target.

ALWAYS be sure of your backstop, what lies beyond, and the safety of bystanders before you shoot.

ALWAYS keep your finger clear of the trigger until ready to fire.

DO NOT brandish, tamper with, or attempt to alter AIRSOFT GUN in any way. Actions may result in injury, especially to the eye.

ALWAYS use clean, dry, ammunition of the proper type and caliber for your AIRSOFT GUN. Never reuse ammunition.

ALWAYS be sure you and those around you wear proper eye protection when shooting.

ALWAYS carry your AIRSOFT GUN so that you can control the direction of the muzzle if you fall or stumble.

NEVER shoot at a flat surface or water to avoid ricochet.

DO NOT leave a loaded AIRSOFT GUN unattended. AIRSOFT GUNS and ammunition should be stored separately, locked if possible, beyond the reach of children, careless adults, and unauthorized users.

NEVER allow your AIRSOFT GUN to be used by anyone who has not read and understood this operator's manual.

ALWAYS be sure that the barrel is clear of any obstruction.

NEVER drink alcoholic beverages or take drugs before or during shooting, as your vision and judgment could be seriously impaired, making your AIRSOFT GUN handling unsafe.

1.1 EYE PROTECTION



ALWAYS WEAR SAFETY GLASSES THAT MEET THE REQUIREMENTS OF AMERICAN NATIONAL STANDARDS INSTITUTE/INTERNATIONAL SAFETY EQUIPMENT ASSOCIATION (ANSI/ISEA) Z87.1 OR EUROPEAN STANDARD (EN) 166 WHEN HANDLING, PRACTICING, OR PLINKING WITH AN AIRSOFT GUN. WHEN TRAINING OR USING IN FIELD EVENTS AND COMPETITIONS, PROPER EYE AND FACE PROTECTION DESIGNED FOR AIRSOFT GUNS MUST BE WORN BY THE USER AND ANY PERSON WITHIN RANGE.

1.2 PROP 65 WARNING



CANCER AND REPRODUCTIVE HARM WWW.P65WARNINGS.CA.GOV

1.3 EXPLOSION HAZARD



KEEP CO2 CYLINDERS AWAY FROM HEAT AND FLAMES. TEMPERATURES OVER 120 F (50 C) CAN CAUSE AN EXPLOSION RESULTING IN SERIOUS INJURY OR DEATH. NEVER ALLOW CO2 CYLINDERS OR AIRSOFT GUN TO SIT FOR EXTENDED PERIODS OF TIME IN DIRECT SUNLIGHT OR STORE IN YOUR VEHICLE.

TABLE OF CONTENTS

1.0 SAFETY WARNINGS.....	2
2.0 PRODUCT DESCRIPTION.....	5
3.0 MODEL SPECIFICATIONS.....	6
4.0 OPERATING SAFETY.....	7
5.0 FOLDING STOCK.....	8
6.0 LOADING PROPELLANT.....	9
7.0 LOADING MAGAZINE.....	10
8.0 FIRING THE RIFLE.....	11
9.0 ADJUSTING HOP-UP.....	13
10.0 DISASSEMBLY / REASSEMBLY.....	14
11.0 GAS GUN GENERAL USE & MAINTENANCE.....	17
12.0 STORAGE & TRANSPORTATION.....	21
13.0 SAFE USE / HANDLING OF CO2 CYLINDERS.....	23
14.0 SERVICE / SHIPPING POLICY.....	24
15.0 WARRANTY INFORMATION.....	25

2.0 PRODUCT DESCRIPTION



3.0 MODEL SPECIFICATIONS



MODEL	MCK RATTLER
SKU	AIR-PF-RATTLER-CO2
Operating System	CO2 (12g, Dual Cartridge)
Action Type	Select-Fire (Blowback)
Muzzle Velocity*	Up to 350 FPS (107 MPS) w/ 0.20g
Muzzle Energy*	Up to 0.84 FPE (1.14J) w/ 0.20g
Caliber	6mm
Ammo Type	BB (Airsoft)
Optimal Ammo Weight	0.20g - 0.28g
Magazine Capacity	30 rds
Last Round Bolt Hold Op	Yes
Shots Per Charge*	120 - 150
Sights	Adjustable
Optics Mount	Picatinny
Accessory Rail	M-LOK
Hop-Up	Adjustable
Inner Barrel	Brass, Smooth Bore
Muzzle Thread	14mm CCW
Trigger Action	SAO
Trigger Weight	4.0 lbs
Safety	Manual
Receiver Material	Polymer
Stock Material	Polymer
Stock Type	Minimalist, Side Folding
Weight	4.5 lbs (2.04kg)
Overall Length	24 in (610mm)
Overall Height	7.5 in (190mm)
Overall Width	2.5 in (63mm)

*Muzzle Velocity/Energy and Shots Per Charge will vary depending upon ambient temperature and firing cadence.

4.0 OPERATING SAFETY

This air rifle is equipped with ambidextrous selector levers. The left lever is illustrated here however, fire modes can be selected using either the left or right hand lever.



SAFETY ON

The trigger will be physically locked to prevent accidental firing.



SEMI-AUTOMATIC

The rifle will fire one (1) shot for each pull of the trigger until the magazine is depleted.



FULL AUTOMATIC

The rifle will continue to fire for as long as the trigger is depressed until the magazine is depleted.

CAUTION


THE SELECTOR WILL NOT GO INTO THE SAFE POSITION IF THE AIRGUN IS NOT COCKED. DO NOT FORCE THE LEVER INTO SAFE AS THIS CAN CAUSE DAMAGE TO THE TRIGGER MECHANISM.

5.0 FOLDING STOCK



The stock can be folded by grasping the stock near the hinge and, while pressing the receiver downwards **(A)**, pull upwards on the stock **(B)** to unlock it. While doing so, pivot the stock to the left to fold it against the receiver **(C)**. To unfold the stock, pivot the stock away from the receiver until it locks in the extended position.

6.0 LOADING PROPELLANT

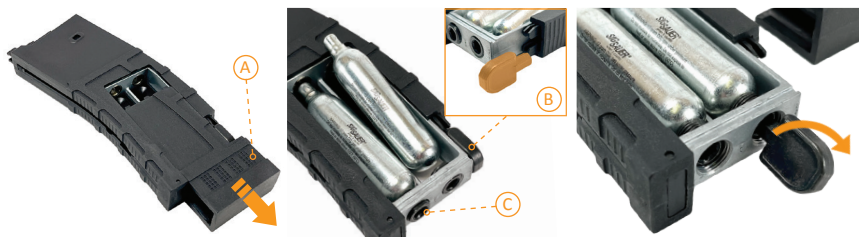

Press the magazine catch to remove the magazine from the airgun. Pull down on the bottom rear corner of the magazine **(A)** to remove the cover. Using the included tool **(B)**, loosen the screws beneath each cartridge housing **(C)** before inserting the 12g CO2 cartridges into the housings as shown. Then, tighten the screws on the bottom of the magazine by turning them clockwise. The sound of gas escaping will be heard as the seal is pierced. Continue tightening the screw until snug. See section **12.0** for instructions on depressurizing the air gun.

NOTICE



THE MAGAZINE IS EQUIPPED WITH AN INTERNAL CHECK VALVE, WHICH PREVENTS GAS FROM ESCAPING THROUGH THE OPPOSITE CYLINDER HOUSING DURING INSTALLATION. FOR THIS REASON, CARTRIDGES CAN BE INSTALLED IN ANY ORDER, AND THE MAGAZINE CAN BE USED WITH ONLY 1 CARTRIDGE INSTALLED IF DESIRED.

7.0 LOADING MAGAZINE



Pull the magazine's follower **(A)** to the bottom of the track and lock the follower into the locking notch **(B)**. Load the BBs into the magazine through the loading port near the bottom of the track. Continue to load the BBs until they reach the bottom edge of the port but are not blocking the opening. Then, push the follower out of the locking notch and back into the track to release it.

8.0 FIRING THE RIFLE

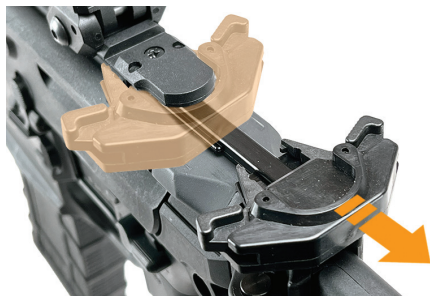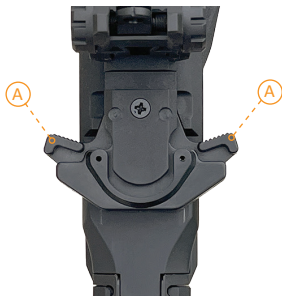

Keep the muzzle pointed in a safe direction. Insert the loaded magazine firmly into the magwell until it locks in place. Grasp the charging handle so that either of the latches **(A)** are pressed to the rear, then pull the charging handle rearward until it stops, then release it. The charging handle will return forwards on its own. This will cycle the internal bolt and cock the rifle. The rifle is now ready to fire.

Aim the rifle at your target and rotate the selector off the safe position to the desired fire mode. Squeeze the trigger to the rear and the rifle will fire. Upon firing the internal bolt will cycle, automatically loading the next BB into the chamber and cocking the rifle. Once all BBs have been fired from the magazine, the internal bolt will lock to the rear and the rifle will stop firing.



Return the selector to the safe position. Press the magazine catch to remove the magazine and reload BBs and propellant if needed. Once the magazine is reloaded, reinsert it into the magwell of the rifle until it locks in place.

The internal bolt is currently locked to the rear and the rifle will not fire until it is released. The internal bolt can be released by either depressing the bolt catch (**B**), or pulling back on the charging handle and releasing. Once the internal bolt has been released, the rifle is ready to fire again.

9.0 ADJUSTING HOP-UP



The hop-up is adjusted with the dial located beneath the handguard **(A)** using a small flat edge screwdriver. Rotating the dial changes the amount of hop-up or backspin being applied to the BB as it is fired through the barrel. This causes the BB to fall less over a given distance than it would without spin applied, extending the effective range of the airsoft gun without increasing velocity. Rotating the dial clockwise (+) will increase the amount of hop-up while rotating the dial counter-clockwise (-) will decrease hop-up.


10.0 DISASSEMBLY/REASSEMBLY



Removing Upper: Press the magazine catch to remove the magazine from the rifle and cycle the charging handle to ensure that the rifle is cocked. Using a pin punch, push both the takedown (A) and pivot (B) pins through the receiver from the left to right. The pins are captured so they will not separate from the rifle. Once the pins are pushed through to their stopping points, push the upper receiver forward and up off of the lower receiver. While doing so, be sure to maintain control of the recoil spring guide (C).

CAUTION


DO NOT PIVOT THE UPPER RECEIVER SHARPLY AWAY FROM THE LOWER RECEIVER AS THIS MAY DAMAGE THE SPRING GUIDE. KEEP THE UPPER RECEIVER PARALLEL TO THE LOWER RECEIVER WHILE REMOVING. MAINTAIN CONTROL OF THE RECOIL SPRING GUIDE DURING DISASSEMBLY AS IT IS FREE FLOATING IN UPPER RECEIVER AND MAY FALL OUT AND BECOME LOST. IT IS RECOMMENDED TO DISASSEMBLE WITH RIFLE HELD HORIZONTALLY.

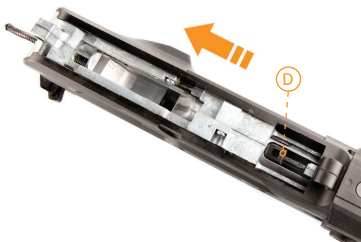

Removing Bolt: Press rearward on the loading nozzle (**D**) to separate it from the chamber and begin pushing the bolt from the upper receiver. Once the end of the bolt reaches the rear of the upper receiver, the bolt can be grasped from the rear and pulled completely from the upper receiver.



Installing Bolt: Ensure that the bolt is lined up with the slots in the upper receiver (**E**) and begin sliding the bolt into the upper receiver. While doing so, keep the recoil spring guide (**F**) inserted into the bolt. Once the bolt is inserted fully into the upper receiver, verify that the recoil spring guide can be depressed into the upper before proceeding with reassembling the rifle.

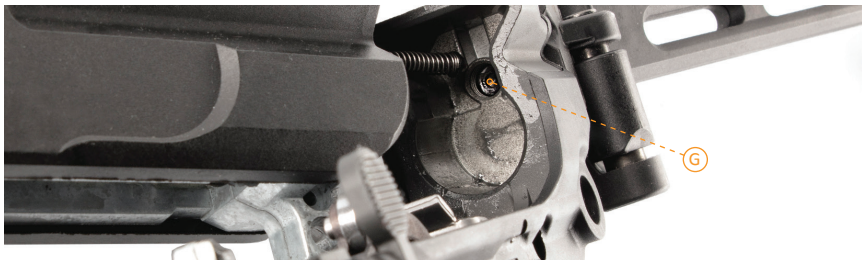

Reinstalling Upper: Align the recoil spring guide with the receptacle **(G)** in the back of the upper receiver and then slowly allow the rear lug of upper receiver to seat down into the lower receiver. Pivot the front of the upper receiver down so that the front lug aligns with the lower receiver. Once the pivot and takedown pin holes are aligned, push the pins back through the receiver until fully seated. Cycle the charging handle to ensure the bolt functions properly after reassembly.

⚠ CAUTION

IF THE CHARGING HANDLE DOES NOT CYCLE PROPERLY AFTER REASSEMBLY, THE RECOIL SPRING GUIDE IS NOT ALIGNED IN THE UPPER CORRECTLY. REPEAT DISASSEMBLY/REASSEMBLY PROCESS TO CORRECT BEFORE FIRING.

11.0 GAS GUN GENERAL USE & MAINTENANCE

TEMPERATURE AND OPERATION

TEMPERATURE: Temperature has a major effect on the performance and function of a gas powered air gun. They will not operate correctly when either the ambient temperature is too cold, or the internal temperature of the gun/gas is too cold. Gas air guns should not be used if the ambient temperature is below 59°F/15°C. Gas will not be able to expand properly when it is cold and will cause the air gun to malfunction as well as reducing performance and efficiency. Additionally, high humidity will have a negative effect on gas expansion similar to cold temperatures.

WARNING SIGNS: When the ambient temperature, or the temperature of the gas and/or gun gets too cold, white plumes of vapor will usually be seen venting from the air gun while firing due to the gas not expanding fully. If this occurs, and ambient temperature/humidity is in the optimal range, the user should stop shooting and allow the air gun to return to room temperature. Components of the air gun should no longer feel cold to the touch before resuming.

RAPID FIRE: When a gas gun is fired rapidly, it will cause the gas temperature to drop quickly. It is important for the user to monitor the temperature of the gas air gun during use and allow time for temperatures to regulate to avoid malfunction. Allowing more time between shots/reloads will increase gas efficiency noticeably. If the gun houses the CO2/Green Gas in its magazine, is recommended to have a spare magazine and alternate between them so that one is able to warm up as the other is being used.

 **OPTIMAL TEMPERATURE RANGE**
59°F/15°C - 90°F/32°C



 WARNING

FOR USE WITH 6MM AIRSOFT BBs ONLY. USE OF ANY OTHER AMMUNITION MAY RESULT IN INJURY, OR DAMAGE TO THE AIRSOFT GUN. DO NOT REUSE AMMUNITION. TO ACHIEVE OPTIMUM ACCURACY AND PERFORMANCE, USE 6MM AIRSOFT BBs WHICH ARE SEAMLESS, POLISHED AND WEIGHING .20g OR HEAVIER.

 WARNING

DO NOT FIRE A GAS GUN WHILE HOLDING IT ON ITS SIDE OR INVERTED. DOING SO WILL CAUSE LIQUIFIED GAS TO EXPEL FROM THE VALVE WHICH CAN CAUSE INJURY IF ALLOWED TO COME IN CONTACT WITH SKIN AND WILL DAMAGE THE SEALS WITHIN THE VALVE.

AMMUNITION

QUALITY AMMO: Avoid using the lowest cost ammo, as lower cost typically translates into lower quality. Low quality ammo can have imperfections which will have a negative impact on performance such as how accurate the gun can be, the velocity it can shoot and how reliability it can feed and function. Investing in higher quality ammo will allow the gun to achieve higher performance with less chance of malfunction. Never use ammo that has visible imperfections such as seams or a rough surface. Ammo with a seamless, high polished finish will provide superior performance.


PROPER WEIGHT: Always use the recommend weight range listed in the air gun's specifications. Using ammo outside of the recommend weight range will have a negative effect on accuracy and may cause the gun to jam or malfunction.



LOADING MAGAZINE

RELEASING FOLLOWER: When loading the magazine, be careful to maintain positive control of the magazine's follower until it, or the BBs it is pushing, are at rest against the top of the magazine. Releasing the follower and allowing it or the BBs to hit the top of the magazine with force will result in damage to the magazine.

UNIFORM PATTERN: Some models have a "double stack" magazine in which the BBs are oriented in a staggered pattern. It is important that the BBs are loaded so that they are staggered in a uniform pattern. Aside from reducing the capacity of the magazine when not staggered correctly, doing so can cause the magazine to jam and fail to feed properly.

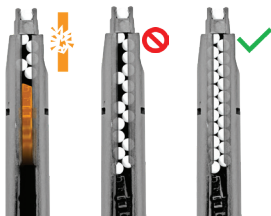

LUBRICATION

OIL TYPE: Air guns require very little maintenance and only require that a thin film of oil be maintained on contact areas between moving parts. Use of silicone oil designed specifically for air gun models is recommended. General purpose lubricants and lubricants for firearms should not be used since they are petroleum based and can be harmful to the seals of an air gun.

CO2 CARTRIDGE: For models which use CO2, a drop of silicone oil should be applied to the tip of the CO2 cartridge, or directly into the pierce pin, every three (3) CO2 cartridges. This will help keep the internal valves and seals of the air gun lubricated.

100% SILICONE OIL



PETROLEUM BASED LUBRICANTS



CO2 CARTRIDGE LUBRICATION



⚠ CAUTION

DO NOT USE .12g BBs OR ANY BB LIGHTER THAN .20g. DO NOT USE ANY BB WHICH IS NOT SEAMLESS AND POLISHED. AVOID USING "BULK" BBs AS THEY ARE TYPICALLY LOW QUALITY AND CAN DAMAGE YOUR AIRSOFT GUN.

⚠ CAUTION

IF THERE IS A JAM OR OBSTRUCTION IN THE BARREL, NEVER ATTEMPT TO SHOOT ANOTHER BB. DOING SO CAN CAUSE PERMANENT DAMAGE TO THE AIRSOFT GUN. STOP FIRING IMMEDIATELY, ENGAGE THE SAFETY AND REMOVE THE MAGAZINE BEFORE CLEARING THE OBSTRUCTION. IF THE MAGAZINE WILL NOT DROP FREE, ATTEMPT TO PULL IT GENTLY FROM THE AIRSOFT GUN. ONLY USE A PLASTIC OR WOODEN CLEARING ROD TO REMOVE OBSTRUCTIONS. USE OF METAL CLEARING RODS CAN CAUSE PERMANENT DAMAGE TO THE BARREL.

12.0 STORAGE & TRANSPORTATION

MAKE IT SAFE

UNLOADING: The best way to unload an air gun is to fire all ammunition from the magazine. If this is not possible, ammunition can be pushed out manually using a small rod or, if applicable, emptied through the loading port.

GREEN GAS MODELS: When storing green gas magazines, it is recommended to keep the magazine pressurized with a small amount of gas in the magazine. This will help maintain the seals and will prolong the life of your air gun.

CO2 MODELS: When storing CO2 magazines, it is recommended to remove the CO2 if the air gun will not be used for an extended period of time. Keeping the cartridge installed against the seal can cause the seal to deform and may prevent it from sealing properly. The best way to empty gas is to simply dry fire the air gun until the cartridge is empty. If a CO2 cartridge still containing gas needs to be removed, hold the magazine upright so that the tip of the cartridge is pointed up and slowly reverse the piercing mechanism to gradually release the gas. Avoid releasing the gas rapidly as this can freeze and damage the pierce pin seal. Never release gas by pressing the exhaust valve!



CAUTION

DO NOT PRESS THE EXHAUST VALVE ON THE BACK OF THE MAGAZINE TO RELEASE GAS. THIS WILL CAUSE A LARGE VOLUME OF GAS TO RUSH OUT AND FREEZE THE SEALS WITHIN THE VALVE WHICH WILL DAMAGE THEM. THE BEST WAY TO EMPTY GAS IS TO SIMPLY DRY FIRE THE AIR GUN UNTIL EMPTY. IF CO2 CARTRIDGE STILL CONTAINING GAS NEEDS TO BE REMOVED, HOLD THE MAGAZINE UPRIGHT SO THAT THE TIP OF THE CARTRIDGE IS POINTED UP AND SLOWLY REVERSE THE PIERCING MECHANISM TO GRADUALLY RELEASE THE GAS. AVOID RELEASING THE GAS RAPIDLY AS THIS CAN FREEZE AND DAMAGE THE PIERCE PIN SEAL.

KEEP IT SAFE

STORAGE: Always store the air gun in a cool, dry place. Never store the air gun in a location with elevated temperatures such as next to a furnace or boiler, or leave the air gun in your vehicle on a warm day. Be aware of high and low temperatures outside of the optimum storage/operating range (59°F/15°C to 90°F/32°C) as parts/equipment such as high pressure gases, seals, etc. can be affected and/or damaged. Store your unloaded air gun separate from your ammunition and in places inaccessible to children and unauthorized persons, under lock and key if possible.

TRANSPORTING: When transporting your air gun, keep it unloaded and on safe for your safety and for the safety of others. It is your responsibility to familiarize yourself with the laws of any state you will be traveling through with your air gun.



WARNING

IMPROPER USE OR HANDLING OF COMPRESSED GAS CAN RESULT IN INJURY OR DEATH. MAXIMUM STORAGE OR OPERATION TEMPERATURES SHOULD NEVER EXCEED 122°F (50°C).

13.0 SAFE USE AND HANDLING OF COMPRESSED GAS CYLINDERS

WARNING

IT IS POSSIBLE THAT CERTAIN CONDITIONS MAY AFFECT A COMPRESSED GAS CYLINDER, WHICH CAN IMPACT ITS PROPER PERFORMANCE. THESE CONDITIONS INCLUDE THE USAGE, MAINTENANCE AND STORAGE AT TEMPERATURES THAT ARE HIGHER OR LOWER THAN (59°F/15°C TO 90°F/32°C).

HIGH TEMPERATURES CAN INCREASE PRESSURE IN THE COMPRESSED GAS CYLINDER, AND WITHIN THE AIR GUN, LEADING TO HIGHER THAN STANDARD OPERATING PRESSURE. THIS EXCESS PRESSURE COULD CAUSE THE AIR GUN TO MALFUNCTION OR BE PERMANENTLY DAMAGED. MAXIMUM STORAGE OR OPERATION TEMPERATURE SHOULD NEVER EXCEED 122°F (50°C). THIS TEMPERATURE CAN BE REACHED IF YOU LEAVE THE AIR GUN UNDER DIRECT SUNLIGHT ON A BRIGHT DAY.

THUS, TO ENSURE PROPER AIR GUN OPERATION, DO NOT EXPOSE IT OR THE COMPRESSED GAS CYLINDERS TO HIGH TEMPERATURES OR DIRECT SUNLIGHT FOR LONG PERIODS OF TIME. OTHERWISE, THE COMPRESSED GAS CYLINDER COULD OVERHEAT AND EXPLODE, WHICH MAY DAMAGE THE AIR GUN AND CAUSE INJURIES OR DEATH TO PEOPLE AROUND IT.

14.0 SERVICE / SHIPPING POLICY

If you have questions concerning the performance or servicing of your Airsoft gun, please write or call:

SIG SAUER, Inc.
Attention: Customer Service
18 Industrial Drive, Exeter, NH 03833

Phone: (603) 610-3000 ext. 1
Fax: (603) 766-7002

IF YOU DO NOT UNDERSTAND THE INSTRUCTIONS FOR OPERATING YOUR AIRSOFT GUN, IT IS YOUR RESPONSIBILITY TO CALL OUR CUSTOMER SERVICE DEPARTMENT AT (603) 610-3000 EXT. 1 BEFORE USING YOUR AIRSOFT GUN.

In the event that you need to return your Airsoft gun to the SIG SAUER Service Department, here's what to do:

1. Contact Customer Service at (603) 610-3000 ext. 1 for a return merchandise authorization (RMA) number, which will allow SIG SAUER to track the status of your return from its receipt at SIG SAUER through its return to you. Please do not send your Airsoft until you obtain an RMA number.
2. Make sure that the chamber and magazine(s) are unloaded and that no ammunition is included with your returned Airsoft gun.
3. Package the Airsoft gun securely to prevent damage. Enclose a letter that includes your name, street address, daytime phone number, model and serial number, and a detailed description of the problem you have experienced or the work that you want performed. With the exception of extra magazines, do not include any other accessories such as scopes or mounts.
4. SIG SAUER is not responsible for any Airsoft gun until it is received, nor for damage incurred during shipment.

5. Ship your Airsoft gun insured and prepaid (we do not accept collect shipments) to:

SIG SAUER, Inc.
Attention: Service Department
18 Industrial Drive Exeter, NH 03833

Don't forget to write your RMA number on the package.

A copy of this instruction manual should always accompany this Airsoft gun and be transferred with it upon change of ownership.

15.0 WARRANTY INFORMATION

SIG SAUER AIRSOFT/AIR GUN/AIR ACCESSORY LIMITED WARRANTY

SIG SAUER warrants that the enclosed AIRSOFT/AIRGUN/AIR ACCESSORY product was originally manufactured free of defects in material, workmanship, and mechanical function. For the applicable periods listed below, SIG SAUER agrees to correct any defect in the product for the original purchaser by repair, adjustment, or replacement, at SIG SAUER's option, with the same or comparable quality components (or by replacing the product at SIG SAUER's option); provided however, that the product is returned unloaded and freight prepaid to SIG SAUER at 18 Industrial Drive, Exeter, NH, 03833.

Limited Warranty Applicable Periods:

- SIG SAUER® AIR ONE Airsoft Models – Thirty (30) days from date of purchase
- SIG SAUER® PROFORCE Airsoft Models – Ninety (90) days from date of purchase

- SIG SAUER® AIRGUN Models (non-HUNTER models) – One-hundred and eighty (180) days from date of purchase
- SIG SAUER® HUNTER AIRGUN Models – One (1) year from date of purchase
- SIG SAUER® AIR ACCESSORIES – Sixty (60) days from date of purchase

Proof of purchase will be required with any request for warranty repair.

This limited warranty is null and void if the product has been misused, damaged (by accident or otherwise), fired with improper ammunition, fired with an obstruction in the barrel, damaged through failure to provide reasonable and necessary maintenance as described in the manual accompanying the product, or if unauthorized repair or any alteration, including of a cosmetic nature, has been performed on the product. This limited warranty does not apply to normal wear and tear of any parts.

Subject to the foregoing, this limited warranty confers the right to have the covered product or its parts repaired, adjusted, or replaced exclusively upon the original purchaser, which right is not transferable to any other person.

ANY WARRANTIES IMPLIED BY LAW, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED. REPAIR, ADJUSTMENT, OR REPLACEMENT AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY FOR ANY DEFECTIVE PRODUCT. IN NO EVENT SHALL SIG SAUER OR ANY COMPANY AFFILIATED WITH SIG SAUER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND ARISING OUT OF THE PURCHASE OR USE OF THIS PRODUCT, WHETHER BASED UPON CONTRACT, TORT, STATUTE, OR OTHERWISE. Some states do not allow the exclusion or limitation of implied warranties, or the exclusion or limitation of incidental or consequential damages, so some or all of the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State-to-State.

THIS WARRANTY APPLIES TO U.S. COMMERCIAL CUSTOMERS ONLY, AND DOES NOT APPLY TO GOVERNMENT, MILITARY, LAW ENFORCEMENT, OR NON-US CUSTOMERS. NON-US CUSTOMERS SHOULD CONTACT THEIR LOCAL DEALER OR DISTRIBUTOR FOR APPLICABLE WARRANTY COVERAGE.



sigsauer.com

**SIG SAUER, Inc.
72 Pease Boulevard, Newington, NH 03801 USA**

All trademarks, service marks, trade names, trade dress, product names and logos appearing in this manual are the property of their respective owners. No trademark or service mark appearing in this manual may be used without written consent of the mark's owner.