

QUICK START GUIDE

KEY FEATURES


FOXTROT-EDC FULL-SIZE

- 1350 Lumens
- 33,000 Candela
- (2) 18650 High-Capacity Li-ion Rechargeable Batteries
- Flexcore™ Technology Allows The Light To Run Using:
1 x 18650 High-Capacity Li-ion Rechargeable Battery or
2 x CR123A Lithium Batteries (optional, not included)
- Up to 1.5 Hours of Runtime Using The Supplied 18650 Rechargeable Battery
- Push Button Activation
- Momentary & Latching Activation
- Deep Carry Pocket Clip



FOXTROT-EDC COMPACT

- 1350 Lumens
- 33,000 Candela
- (2) 18350 High-Capacity Li-ion Rechargeable Batteries
- Up to 1 Hour of Runtime Using The Supplied 18350 Rechargeable Battery
- Push Button Activation
- Momentary & Latching Activation
- Deep Carry Pocket Clip



OPERATION

To operate the light in latching mode, press the push button activation switch until you feel a click. The light will now remain ON. To turn the light OFF press the push button activation switch until you feel a click and release the activation switch.


To operate the light in momentary mode, slightly press the push button activation switch. To turn the light OFF release the push button activation switch.

RECHARGING HI-CAPACITY LI-ION RECHARGEABLE BATTERIES

To recharge the supplied 18650 or 18350 rechargeable battery use the supplied USB-C cable and insert the USB-C end of the cable into the USB-C port on the battery. Insert the USB side of the cable into a USB outlet. When the battery is fully charged the LED on the (+) end of the battery will turn green.

BATTERY INSTALLATION AND REPLACEMENT

1. Unscrew bezel counterclockwise to remove the battery.
2. Insert a fully charged 18650 or 2 x CR123A lithium batteries (optional, not included) in the full-size flashlight or a fully charged 18350 Li-ion battery in the compact flashlight, (-) end first into housing.
3. After battery is inserted into the housing, thread the bezel clockwise back into the housing until fully tightened.

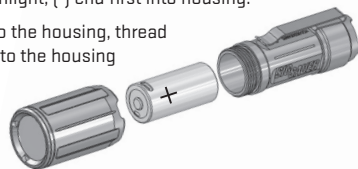

RISK GROUP 2

WARNING: IR emitted from this product. Do not stare at operating lamp.

CAUTION: Possibly hazardous optical radiation emitted from this product. Do not stare at operating lamp. May be harmful to the eyes.

SIGSAUER

Scan QR code to download
user manuals at [sigsauer.com/
owners-manuals/](https://sigsauer.com/owners-manuals/)

