
SIGSAUER



ROMEO-X

ENCLOSED COMPACT and PRO Reflex Sights OPERATOR'S MANUAL

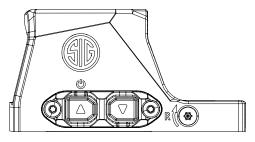

CONTENTS

troduction	.3
ontents	
ey Features	.5
OMEO-X Product Identification	.6
eneral Safety Information:	8.
peration	11
stallation	13
ounting The Sight	13
ght Adjustments And Zeroing	15
aintenance	
oubleshooting	18
pecifications	19
G SAUER Electro-Optics Infinite Guarantee®/Limited Lifetime Warranty	20



WARNING: CANCER AND REPRODUCTIVE HARM—www.P65warnings.ca.gov



INTRODUCTION

Designed, developed, tested and assembled in the USA, the ROMEO-X Enclosed reflex sights are rugged pistol optics that are packed with features. The COMPACT model fits all Shield® RMS-c footprints and the PRO model fits all DeltaPoint® PRO footprints.

The ROMEO-X features a high-efficiency point source LED emitter and aspherical glass lens, utilizing a high-performance red notch reflector coating for excellent brightness and light transmission with zero distortion. The Enclosed model also features a rear glass window, and a completely sealed and purged optical system, for protection from the elements. Available in several reticle options with 15 brightness settings, the ROMEO-X ensures rapid target engagement with both eyes open, for maximum situational awareness. D.A.R.C. (Dark Adaptive Reticles & Coatings) technology provides the ideal reticle brightness and target clarity while using GEN3+night vision devices. MOTAC (Motion Activated Illumination) automatically shuts the optic off after 2 minutes of inactivity, then automatically turns it back on when motion is detected. The common CR1632 battery is accessed from the side of the optic, making battery changes easy, without the need to remove the optic from the firearm.

The ROMEO-X is covered by the SIG SAUER Electro-Optics Infinite Guarantee/ Limited Lifetime Warranty

CONTENTS

- ROMEO-X Enclosed COMPACT or PRO 1x24mm Enclosed Reflex Sight
- CR1632 Battery
- · Mounting Screws
 - M3 & M4 Torx® Mounting Screws (COMPACT)
 - M4 Torx Mounting Screws (PRO)
- · T6 & T10 Torx Wrenches
- · Operator's Manual



Scan the QR code to visit sigsauer.com where you will find additional information about SIG SAUER products, SIG SAUER Academy and the SIG Experience Center, Special Programs, and additional support.



KEY FEATURES


- · 7075 Aluminum housing.
- Extremely low deck height, allowing a full sight picture and co-witness with standard-height sights.
- Aspherical glass front lens for zero distortion, and rear glass window for a completely sealed optical system.
- High-efficiency point source LED emitter.
- Independent brightness adjustment buttons that are recessed within a protective plate.
- 15 brightness settings (12 Daylight/3 NV).
- Side-mounted CR1632 battery compartment with threaded cap for easy battery changes without the need to remove the optic from the firearm.
- Minimum continuous runtime of 20,000 hours, at medium brightness setting (dot only).

- MOTAC (Motion Activated Illumination) that powers up when it senses motion and powers down when it does not.
- D.A.R.C. (Dark Adaptive Reticles & Coatings) technology provides ideal reticle brightness and target clarity while using GEN3+ night vision devices.
- Dependable waterproof performance (IPX-7 rated for complete water submersion up to 1 meter).
- Designed, developed, tested and assembled in the USA.
- SIG SAUER Electro-Optics Infinite Guarantee/ Limited Lifetime Warranty.


ROMEO-X ENCLOSED PRODUCT IDENTIFICATION

(PRO Model Shown, COMPACT model is similar)

- A ▲ (Up) Brightness Adjustment (Press and Release), and Power ON/OFF (Press and Hold)
- B ▼(Down) Brightness Adjustment (Press and Release), and Reticle Change (Press and Hold – Circle/Dot models only)
- C Windage Adjustment Screw
- D Battery Cap
- E Mounting Screw Holes
- F Elevation Adjustment Screw
- G Rear Window
- H Front Lens
- I Recoil Lug Witness Holes

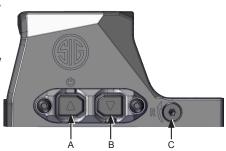

SIGSAUER

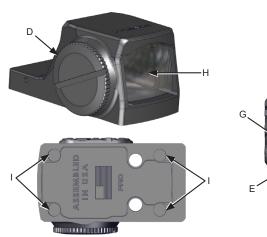



GENERAL SAFETY INFORMATION

A WARNING

- INGESTION HAZARD: This product contains a button cell or coin battery.
- DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH OF CHILDREN
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.
- Keep in original package until ready to use.
- Immediately dispose of used batteries and keep away from children. Do NOT dispose
 of batteries in household trash.
- For treatment information call: The National Battery Ingestion Hotline (NBIH) 1-(800) 498-8666





WARNING

- · Even used batteries may cause severe injury or death.
- · Call a local poison control center for treatment information.
- Compatible battery: CR1632
- Nominal voltage: 3V
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately discard batteries from equipment not used for an extended period of time.
- · Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.



WARNING UNLOAD/CLEAR



BEFORE WORKING ON YOUR ROMEO-X SIGHT, ALWAYS ENSURE THAT THE FIREARM IS UNLOADED AND CLEARED WITH THE SAFETY ON AND POINTED IN A SAFE DIRECTION. FAILURE TO COMPLY COULD RESULT IN INJURY OR DEATH.



OPERATION

Installing the Battery

The battery cap is located on the right side of the optic and is threaded into the housing.

- 1. Use a properly sized flat blade tool in the slot, turn counterclockwise to remove.
- 2. Install a fresh CR1632 coin cell battery with the positive (+) side facing out.

Install battery cap by carefully threading it clockwise into the housing until it is tight against housing. Periodically check cap during use to ensure it is fully tightened.



Turning Sight On and Off

- Turn the sight ON by pressing and holding the ▲ (UP) brightness button for over 1 second. Turn the sight OFF by repeating the same procedure.
- FOR CIRCLE/DOT MODELS ONLY To cycle through the reticles (dot, circle, and circle/dot combination) press and hold the ▼ (DOWN) brightness button for over 1 second. Release the button when the desired reticle is being displayed.
- The ROMEO-X features MOTAC (Motion Activated Illumination System). If the illuminated reticle does not detect motion for 2 minutes, it automatically shuts off. The instant the optic detects motion, it powers on returning to the previous brightness and reticle setting.
- The ROMEO-X has 15 brightness settings, 12 daylight and 3 night vision. While
 the sight is ON, increase the brightness of the reticle by pressing and releasing
 the ▲ (UP) brightness button until the desired brightness level is reached. To
 decrease the brightness, press and release the ▼ (DOWN) brightness button.
 The reticle will blink 5 times when the highest or lowest setting is reached. At the
 lowest setting the blinks are only visible with a night vision device.



INSTALLATION



WARNING UNLOAD/CLEAR



BEFORE WORKING ON YOUR ROMEO-X SIGHT, ALWAYS ENSURE THAT THE FIREARM IS UNLOADED AND CLEARED WITH THE SAFETY ON AND POINTED IN A SAFE DIRECTION. FAILURE TO COMPLY COULD RESULT IN INJURY OR DEATH.

MOUNTING THE SIGHT

The ROMEO-X comes in 2 models, COMPACT and PRO.

The COMPACT model is designed to mount to any firearm or mount that uses the Shield RMS-c mounting footprint. The PRO model is designed to mount to any firearm or mount that uses the DeltaPoint Pro mounting footprint. Remove any pistol optic cover plate from the pistol slide (refer to your firearm owner's manual). Use a dry rag to thoroughly remove any oil from the optics cut area and a cotton swab soaked in Isopropyl alcohol to remove any oil/solvent/debris from the threaded optic mounting holes.

The ROMEO-X comes with mounting screws for the most common pistols in the industry. The mounting screws are labeled with the part number, and correspond to the following mounting applications and torque values:

SCREW PART NUMBER	SCREW SIZE	DRIVE	APPLICATION	TORQUE (INCH POUNDS)
7404261 (compact model only)	M3X0.5- 11.75MM	T10 TORX	SIG P365	24
model only)	11.75MW	T10 TORX	SIG P322	12
7404262	M4X0.7- 9.75MM	T10 TORX	SIG PRO CUT SLIDES, ANY DELTAPOINT® PRO FOOTPRINT	28
7404786	M4X0.7- 8.75MM	T10 TORX	GLOCK® MOS PISTOLS AND ADAPTER PLATES, SPRINGFIELD HELLCAT®	28

If mounting the ROMEO-X to an aluminum slide, mount, or adapter plate, see the slide/mount/plate manufacturer's torque specifications. For other SIG SAUER optics-ready pistols not listed above, contact SIG SAUER Customer Service for mounting screw information, torque values, and mounting guidance.

Select the proper mounting screws and test them first to ensure they thread smoothly into the mounting surface holes. Set the ROMEO-X onto the mounting surface, lining up any protruding recoil bosses in the mounting surface with the recoil lug witness holes in the bottom of the optic. Insert the mounting screws through the optic mounting screw holes and slowly thread them into the threaded holes in the mounting surface, while putting forward pressure (toward the muzzle) on the optic housing. Torque the mounting screws to the appropriate torque value. It is strongly recommended that you use an inch-pound torque wrench.



SIGHT ADJUSTMENTS AND ZEROING

Elevation Adjustments – The elevation adjustment screw is located on top of the rear deck of the optic, just behind the mount screw holes. To raise your point of impact, use the supplied T6 Torx wrench to turn the adjustment screw counterclockwise. To lower your point of impact, turn the adjustment screw clockwise. Each click of the adjustment screw is equal to 1.0 MOA.

Windage Adjustments – The windage adjustment screw is located on the left side of the optic, just behind the brightness adjustment buttons. To move your point of impact right, use the supplied T6 Torx wrench to turn the adjustment screw clockwise. To move your point of impact left, turn the screw counterclockwise. Each click of the adjustment screw is equal to 1.0 MOA.

NOTE

The directional arrows near the adjustment screws indicate the direction your bullet impacts will move. They do not indicate the direction the reticle is moving.

Elevation Adjustment				
POI Up	1	r		
POI Down	1	U		
Windage Adjustment				
POI Right	→	₹ U		
POI Left	←	Ŋ		

Zeroing – When mounted, the ROMEO-X should be sighted in just like a rifle optic. A precise group (minimum 5 rounds) should be shot at a cardboard or paper target. Compare the Point of Aim (POA) you held on the target with the Point of Impact (POI) of the rounds on the target. Use the windage and elevation adjustments to bring the point of aim together with the point of impact. It is recommended that initial sightin procedure be done with a paper target at 5-7 yards, before moving the target to greater distances for final zeroing.



MAINTENANCE



WARNING UNLOAD/CLEAR



BEFORE WORKING ON YOUR ROMEO-X SIGHT, ALWAYS ENSURE THE FIREARM IS UNLOADED AND CLEARED WITH THE SAFETY ON AND POINTED IN A SAFE DIRECTION. FAILURE TO COMPLY COULD RESULT IN INJURY OR DEATH.

CAUTION

ALWAYS BLOW DUST OR DEBRIS FROM LENSES PRIOR TO USING ANY CLOTH OR LENS PEN. FAILURE TO DO THIS MAY RESULT IN SCRATCHING OF THE LENSES.

- Cleaning Keep glass lens clear by using a clean, soft lens cloth. To avoid scratches in the surface of the lens coatings, be sure to remove any brass particles, dirt, dust or carbon buildup from the glass before wiping the surface. Use compressed air to blow away debris, and a cotton swab lightly soaked in Isopropyl Alcohol to remove carbon.
- Replacing the battery See page 11 of this manual.

TROUBLESHOOTING

POI Changes between groups when shooting from a single set distance

- Check that your mounting screws are torqued to the correct specification (see page 14)
- Check for variations in ammunition brand, bullet weight, and velocity specs.
- Check/clean your firearm.

Reticle not illuminated

- Press and hold the ▲ (UP) brightness adjustment button for over 1 second.
 Continue to press and release the UP brightness adjustment button to make sure
 the illuminated reticle is not in one of the lowest illumination levels, which can be
 difficult to see in bright environments.
- · Ensure the battery is installed properly (+ facing out).
- · Make sure the battery cap is fully tightened against the housing.
- Replace the battery.



SPECIFICATIONS		
OVERALL LENGTH	COMPACT: 1.61" (41mm) / PRO: 1.83" (46.5mm)	
OVERALL HEIGHT	.94" (23.9mm)	
OVERALL WIDTH	1.22" (31mm)	
WEIGHT WITH BATTERY	COMPACT: 1.2 oz (34.0g) / PRO: 1.4 oz (39.7g)	
MAGNIFICATION	1x	
CLEAR APERTURE DIAMETER	24mm	
RETICLE	3 or 6 MOA red dot, 3 or 6 MOA green dot, or 2 MOA red dot / 32 MOA red circle (circle/dot)	
BATTERY TYPE	CR1632	
BATTERY RUNTIME	Up to 20,000 hours (continuous at medium setting, dot only)	
OVERALL ELEVATION TRAVEL	60 MOA	
OVERALL WINDAGE TRAVEL	70 MOA	
BRIGHTNESS SETTINGS	15 (12 daylight, 3 NV) – GEN3+ Night Vision compatible	
WATER RESISTANCE	IPX7	
WINDAGE/ELEVATION ADJUSTMENT (Per click)	1.0 MOA	



SIG SAUER ELECTRO-OPTICS INFINITE GUARANTEE®/LIMITED

SIG SAUER® has manufactured the most rugged, dependable, high-performance firearms for more than two centuries. Our heritage of design, engineering, and precision-manufactured quality predates the existence of any other optics company worldwide. We understand the importance of quality in the line of fire, at the shooting range or on your

next hunt. SIG SAUER Electro-Optics had to earn the right to wear that badge and the Infinite Guarantee has your back, forever. Period.

We will repair or replace your SIG SAUER product in the event it becomes damaged or defective, at no charge to you. If we cannot repair your product, we will replace it with a product in perfect working order of equal or better physical condition.

SIG SAUER® Infinite Guarantee®

- · Limited Lifetime Guarantee
- Fully Transferable
- No Warranty Card Required
- No Receipt Required
- · No Time Limit Applies
- No Charge



Please note that our Infinite Guarantee excludes coverage for intentional damage, misuse, cosmetic damage that does not affect the performance of the optic, loss, theft, or unauthorized repair or modification. Excludes Tritium components.

Customers seeking warranty coverage must first obtain a Return Merchandise Authorization (RMA) by contacting SIG SAUER Customer Service, and return the product unloaded and freight prepaid.

ANY WARRANTIES IMPLIED BY LAW, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED. REPAIR, ALTERATION, OR REPLACEMENT AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY FOR ANY DEFECTIVE PRODUCT. IN NO EVENT SHALL SIG SAUER OR ANY COMPANY AFFILIATED WITH SIG SAUER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND ARISING OUT OF THE PURCHASE OR USE OF THIS PRODUCT, WHETHER BASED UPON CONTRACT, TORT, STATUTE. OR OTHERWISE.

Some states do not allow the exclusion or limitation of implied warranties, or the exclusion or limitation of incidental or consequential damages, so some or all of the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

THIS WARRANTY APPLIES TO COMMERCIAL CUSTOMERS ONLY, AND DOES NOT APPLY TO GOVERNMENT, MILITARY, LAW ENFORCEMENT, OR NON-US CUSTOMERS. NON-US COMMERCIAL CUSTOMERS MUST PURCHASE PRODUCT THROUGH AN AUTHORIZED SIG SAUER DEALER WITHIN THEIR COUNTRY OF RESIDENCE FOR THIS WARRANTY TO APPLY.

NOTES:



NOTES:



FOR PRODUCT SERVICE ON THIS MODEL, PLEASE CALL (603) 610-3000

12100 SW TUALATIN RD, TUALATIN, OR 97062 USA

All trademarks, service marks, trade names, trade dress, product names and logos appearing in this manual are the property of their respective owners. No trademark or service mark appearing in this manual may be used without written consent of the mark's owner.